




SPARE PARTS CATALOGUE

ZÜNDAPP CITATION

PRINCETON CYCLE SHOP (598)
BOX 358
PRINCETON, KENTUCKY

ZÜNDAPP-WERKE G.M.B.H. · NÜRNBERG

	page
Engine case and engine case cover	5—7
Oil Pan and Oil Pump	9
Crankshaft, Piston	11
Shifting device	13
Cylinder and Cylinder head	15—17
Carburettor	19
Driving Parts	21
Clutch	23
Generator	25
Frame and other parts	27
Front swinging arm suspension	29—31
Telescopic front fork	33—35
Front wheel	37
Rear wheel	39—41
Swinging arm suspension	43
Handlebar	45
Foot brake lever	47
Bowden cables	49
Dual Seat, Tool box, Center stand	51
Fuel Tank	53
Fenders — Chain guard	55
Exhaust pipes, mufflers	57
Lighting set	59
Crash bar, Extra side stand	61
Tools	63

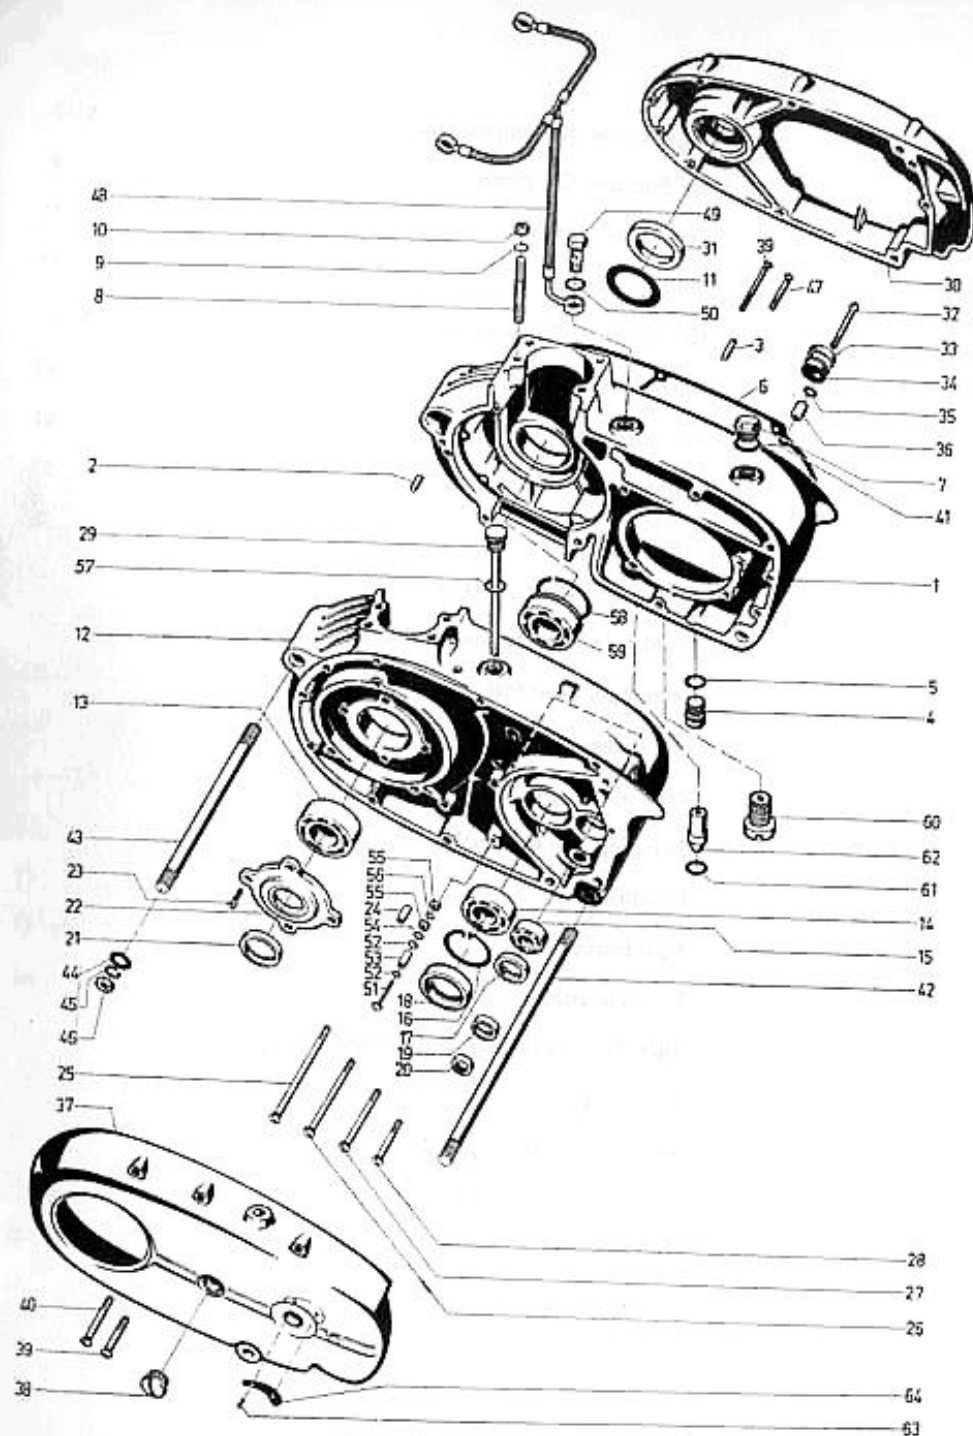



Engine case and engine case cover

Picture No.	Order No.	Designation	Quantity
1	23 11 02 00	Engine case, right	1
2	DIN 7	Cylindrical pin 8x29	2
3	DIN 7	Cylindrical pin 6x29	5
4	DIN 908	Screw plug M 14x1,5	1
5	DIN 7603	Seal ring C 14x18	1
6	07 22 90 01	Gasket for Engine case cover, right	1
7	03 22 12 00	Cover	1
8	00 91 45 02	Stud screw	8
9	DIN 127	Spring washer	8
10	00 91 10 11	Hexagon nut	8
11	00 91 35 102	Spacer shim	x
	00 91 35 103	Spacer shim	x
	00 91 35 104	Spacer shim	x
12	23 11 01 00	Engine case, left	1
13	DIN 5412	Roller bearing with inner ring NJM 25 Cna	1
14	DIN 5412	Roller bearing with inner ring NJM 20 C3na	1
15	DIN 625	Roller bearing with inner ring 6304 C3	1
16	DIN 472	Circlip 52x2	1
17	DIN 6504	Seal ring	1
18	DIN 6504	Seal ring	1
19	DIN 6504	Seal ring	1
20	DIN 6504	Seal ring	1
21	DIN 6504	Seal ring	1
22	23 11 55 00	Seal carrier	1
23	DIN 63	Oval head screw	4
24	07 22 41 01	Bushing for clutch pressure bolt	1
25	DIN 91	Oval head screw	1
26	DIN 91	Oval head screw	7
27	DIN 91	Oval head screw	1
28	DIN 91	Oval head screw	1
29	23 10 44 00	Dipstick	1
30	07 11 11 03	Engine case cover, right	1
31	DIN 6504	Seal ring	1
32	DIN 91	Oval head screw	1
33	00 94 79 04	Rubber roller	1
34	07 22 22 00	Brake stop roller	1
35	DIN 6797	Spring washer	1
36	00 92 32 46	Spacer roller	1
37	07 11 10 02	Engine case cover, left	1
38	07 24 55 01	Screw plug	1
39	DIN 91	Oval head screw	16
40	DIN 91	Oval head screw	1
41	DIN 7603	Packing washer	1
42	07 32 51 00	Engine fastening spindle, rear	1
43	07 32 52 02	Engine fastening spindle, front	1
44	00 91 30 39	Washer	2
45	DIN 127	Spring washer	2
46	DIN 934	Hexagon nut	2
47	DIN 91	Oval head screw	2
48	07 16 12 02	Oil Pipe	1
49	23 10 93 00	Hollow screw	1
50	DIN 7503	Packing washer	2
51	07 17 45 00	Contact screw for neutral indicator	1
52	03 94 15 17	Gasket	2
53	03 98 54 20	Isolating sleeve	1
54	00 91 30 01	Washer	1

Engine case and engine case cover


Picture No.	Order No.	Designation	Quantity
55	DIN 934	Hexagon nut M 4	2
56	DIN 127	Spring washer	1
57	DIN 7603	Packing washer	1
58	DIN 5417	Circlip	1
59	DIN 625	Ball bearing	1
60	08 10 99 00	Security valve	1
61	00 94 79 35	Rubber gasket	1
62	08 16 30 00	Oil stud	1
63	DIN 661	Rivet	2
64	07 23 09 00	Slide plate	1
		* apply as many as needed	

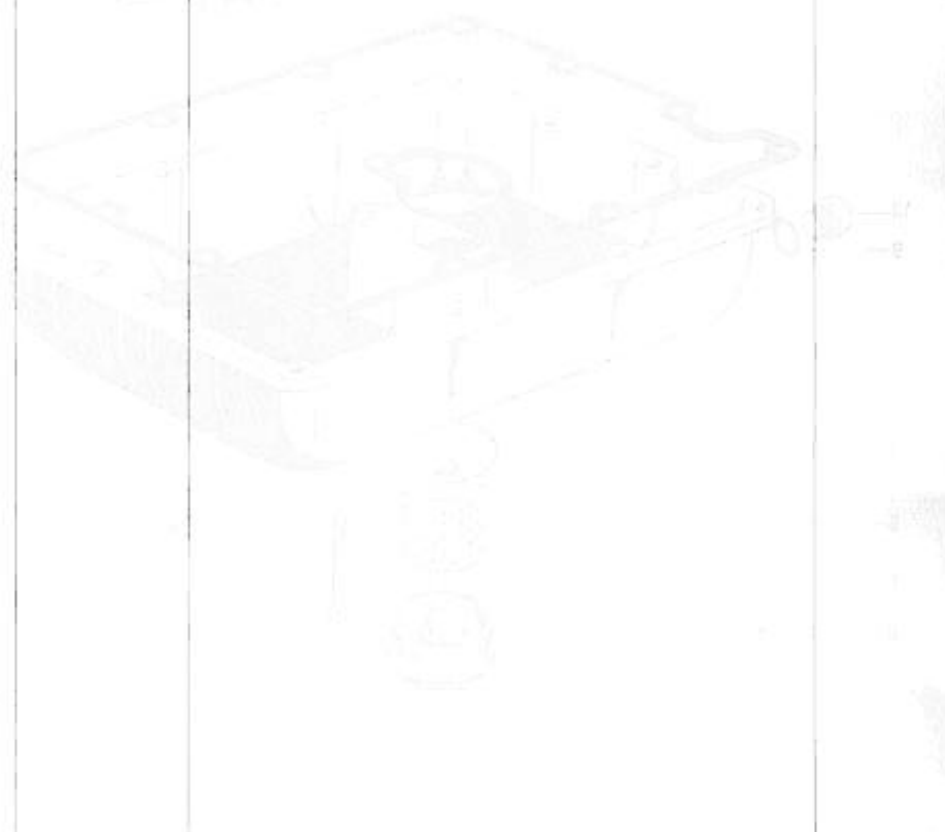

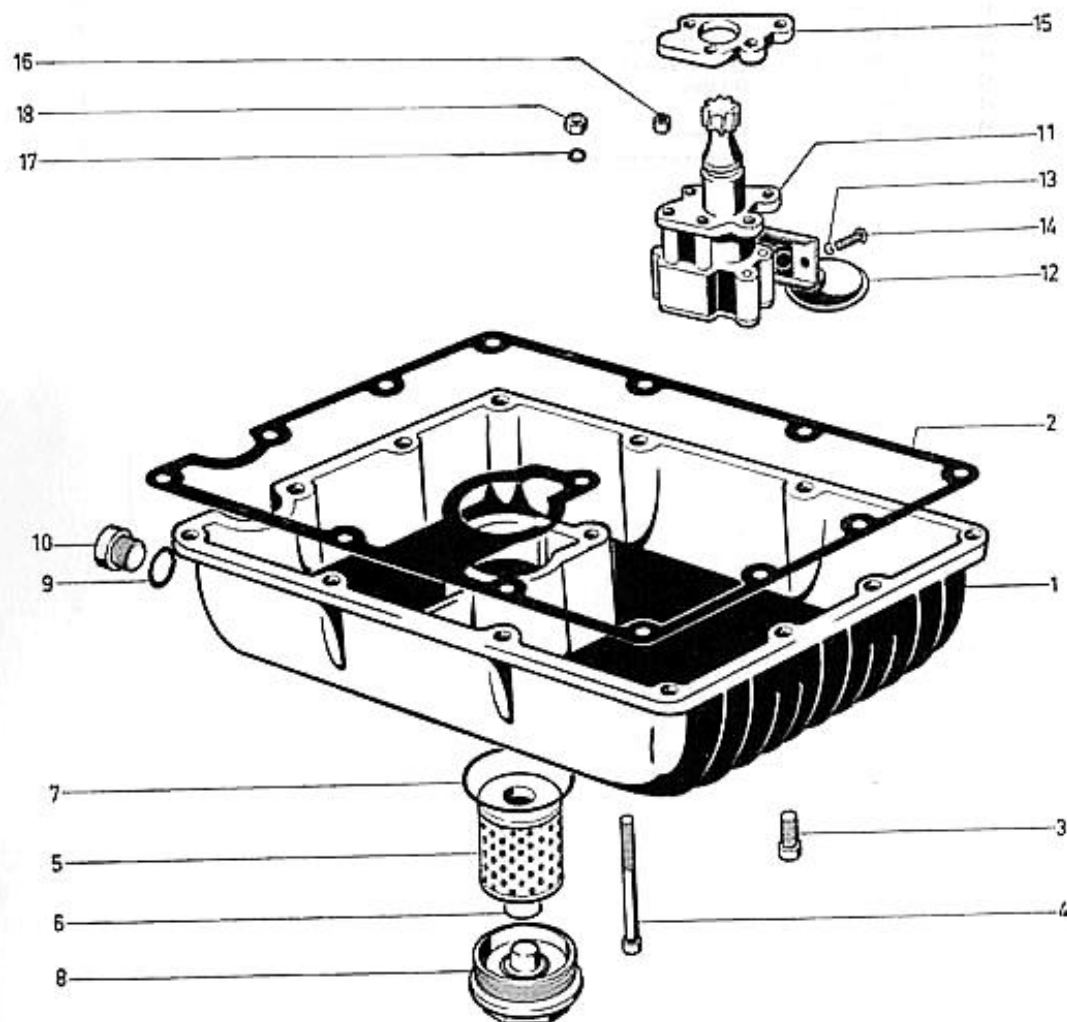

Oil Pan and Oil Pump

Picture No.	Order No.	Designation	Quantity
1	23 11 06 00	Oil Pan	1
2	23 11 96 00	Gasket	1
3	DIN 912	Allenhead screw	12
4	DIN 912	Allenhead screw	1
5	08 16 31 00	Micro filter	1
6	00 94 79 36	Rubber gasket	1
7	DIN 7603	Sealring	1
8	08 10 100 00	Screw plug	1
9	DIN 7603	Seal ring	1
10	DIN 908	Screw plug	1
11	08 16 01 01	Oil pump compl.	1
12	23 16 56 00	Sieve	1
13	DIN 127	Spring washer	2
14	DIN 86	Half round screw	2
15	18 16 05 00	Intermediate flange	1
16	00 94 15 04	Packing washer	2
17	DIN 6797	Spring washer	3
18	DIN 934	Hexagon nut	3

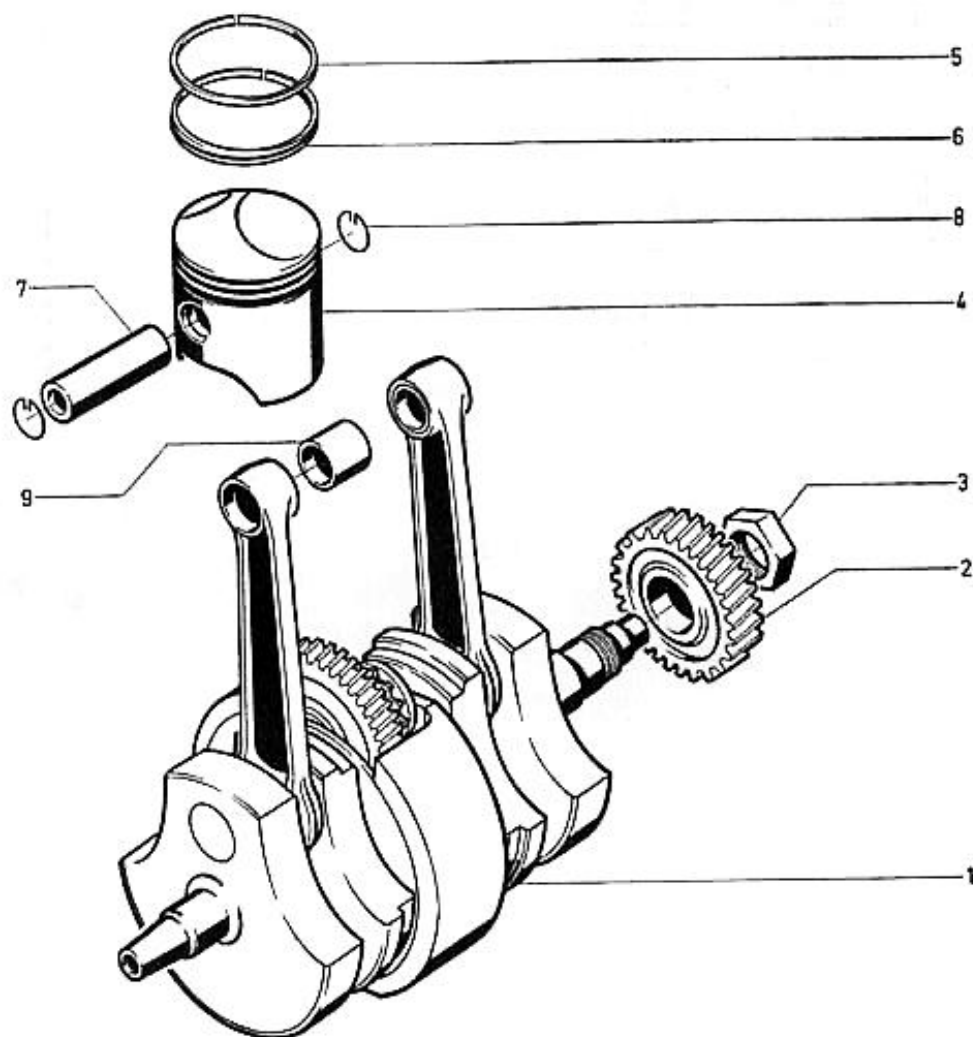


Crankshaft, Piston

Picture No.	Order No.	Designation	Quantity
1	23 10 20 00	crankshaft compl.	1
2	23 24 29 00	Engine chain sprocket	1
3	00 91 18 60	Hexagon nut	1
4	23 12 51 00	Piston	2
5	23 12 56 00	Piston ring	4
6	23 12 57 00	Oil scraper ring	2
7	23 12 54 00	Gudgeon pin	2
8	DIN 73123	Circlip	4
9	23 12 41 00	Small end bush	2


As to the different crankshaft parts please turn over to page

- 61 -

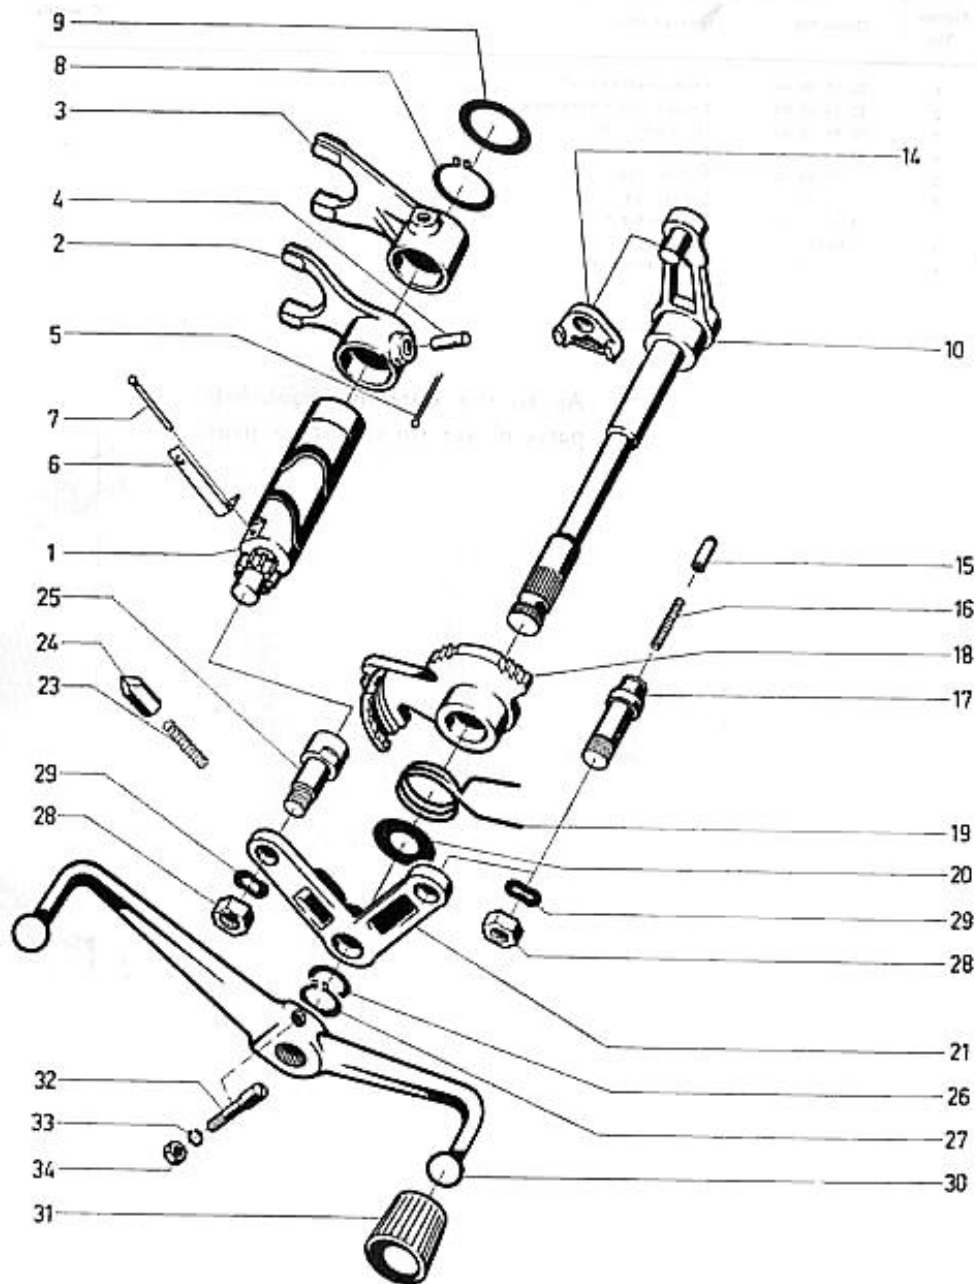

Shifting device

Picture No.	Order No.	Designation	Quantity
1	07 21 24 00	Cam drum	1
2	07 21 31 00	Shifting fork	1
3	07 21 32 00	Shifting fork	1
4	07 21 42 00	Guide bolt	1
5	DIN 94	Coiler pin	2
6	07 22 82 00	Contact spring	2
7	DIN 660	Half round rivet	1
8	DIN 471	Circlip	1
9	00 91 35 70	Spacer shim	1
10	07 21 25 00	Shifting axle	1
14	07 21 34 00	Pawl	1
15	07 21 60 00	Pressure pin	1
16	07 21 83 00	Pressure spring	1
17	07 22 10 00	Fixing bush	1
18	07 22 20 00	Segment gear	1
19	07 22 83 00	Spring for segment gear	1
20	00 91 30 44	Washer	1
21	07 22 51 00	Carrier for gear shift	1
23	07 21 82 00	Pressure spring	1
24	07 21 35 00	Stopping bolt	1
25	07 22 45 00	Bearing bush	1
26	00 91 35 69	Spacer shim	1
27	DIN 471	Circlip	1
28	DIN 934	Flat Hexagon nut	1
29	DIN 137	Spring washer	2
30	07 22 36 00	Foot change lever	2
31	07 53 90 00	Rubber knob	1
32	01 22 72 00	Clamping screw	2
33	DIN 127	Spring washer	1
34	DIN 934	Hexagon nut	1

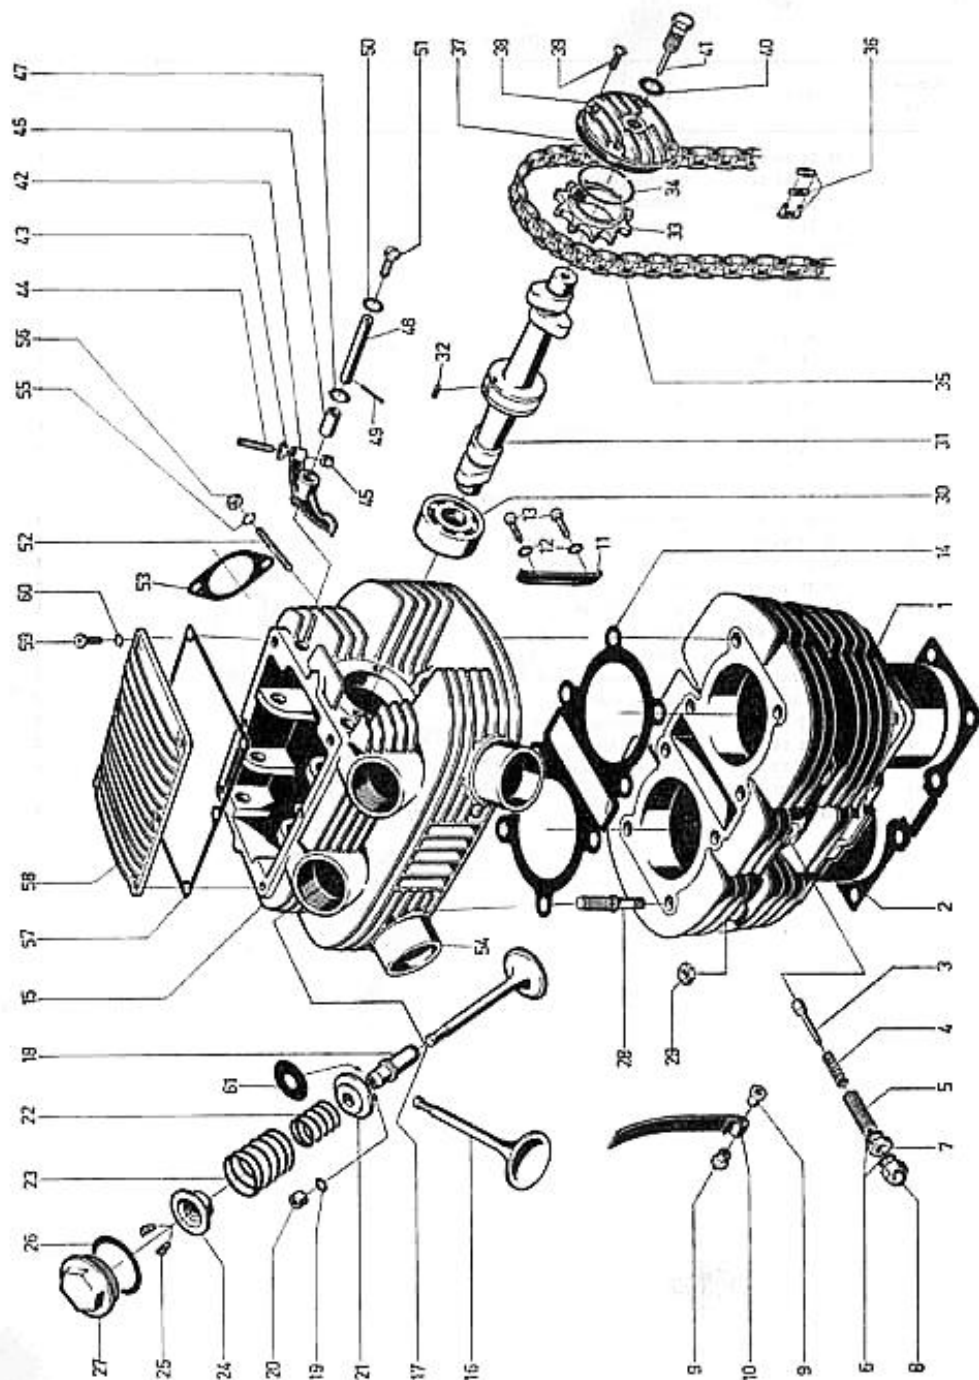


Cylinder and Cylinder head

Picture No.	Order No.	Designation	Quantity
1	23 14 05 00	Cylinder	1
2	23 14 90 00	Cylinder bottom gasket	1
3	07 13 99 00	Adjusting ball	1
4	00 93 28 03	Spring	1
5	07 13 09 01	Tension screw	1
6	DIN 7603	Seal ring	2
7	00 91 18 03	Hexagon nut	1
8	00 91 10 09	Half nut M 14x1,5	1
9	00 94 01 00	Rubber bush	2
10	07 13 93 01	Tension lever	1
11	07 13 91 02	Guide shoe	1
12	DIN 7603	Seal ring	2
13	DIN 912	Allenhead screw	2
14	23 14 91 00	Cylinder head gasket	1
15	23 14 06 00	Cylinder head	1
16	07 13 11 10	Valve, exhaust	2
17	07 13 10 10	Valve, inlet	2
18	07 13 44 03	Valve guide	4
19	00 94 79 29	Rubber ring	4
20	07 13 48 01	Valve guide cap	4
21	01 13 15 00	Valve bottom collar	4
22	03 13 01 00	Valve spring, inner	4
23	11 13 02 00	Valve spring, outer	4
24	07 13 16 01	Valve top collar	4
25	07 13 17 00	Valve collar	8
26	DIN 7603	Seal ring	4
27	07 14 11 00	Screw plug	4
28	07 13 75 00	Screw pin M 10 - M 8	8
29	00 91 10 11	Hexagon nut M 8	8
30	DIN 625	Ball bearing	2
31	07 13 01 60	Camshaft	1
32	DIN 6885	Fitting key	1
33	07 13 20 01	Chain sprocket	1
34	DIN 471	Circlip	2
35	07 13 90 00	Timing chain 64 links	1
36		Chain link	1
37	07 14 95 00	Gasket for bearing cover	2
38	07 14 41 02	Bearing cover	2
39	00 91 11 09	Oval head screw	8
40	DIN 7603	Seal ring	4
41	07 16 74 02	Oil pipe stud	2
42	07 10 33 00	Rocker arm with bush	4
43	00 91 10 06	Hexagon nut M 8x1	4
44	07 13 71 00	Pressure ball	4
45	07 13 60 00	Ball pin	4
46	07 13 42 01	Bush for rocker arm	4
47	00 91 35 41	Shim	x
	00 91 35 42	Shim	x
	00 91 35 43	Shim	x
	00 91 35 52	Shim	x
	00 91 35 53	Shim	x
	00 91 35 54	Shim	x
48	07 13 35 01	Rocker arm axle	4
49	DIN 1471	Conical pin	4
50	00 94 15 62	Seal ring	4
51	07 13 69 00	Screw for rocker arm axle	4


Cylinder and Cylinder head

Picture No.	Order No.	Designation	Quantity
52	00 91 45 02	Screw pin	4
53	23 15 91 00	Gasket for induction stud	2
54	07 14 55 01	Induction stud	2
55	DIN 127	Spring washer B 8	4
56	00 91 10 11	Hexagon nut M 8	4
57	07 14 96 01	Gasket for cylinder head cover	1
58	07 14 10 03	Cylinder head cover	1
59	DIN 912	Allenhead screw	6
60	DIN 127	Spring washer	6
61	00 91 35 98	Spacer shim (used for adjustment of valve spring tension) 13,5×30×0,5	×
	00 91 35 100	Spacer shim (used for adjustment of valve spring tension) 13,5×30×1,5	×
× = apply as many as needed			

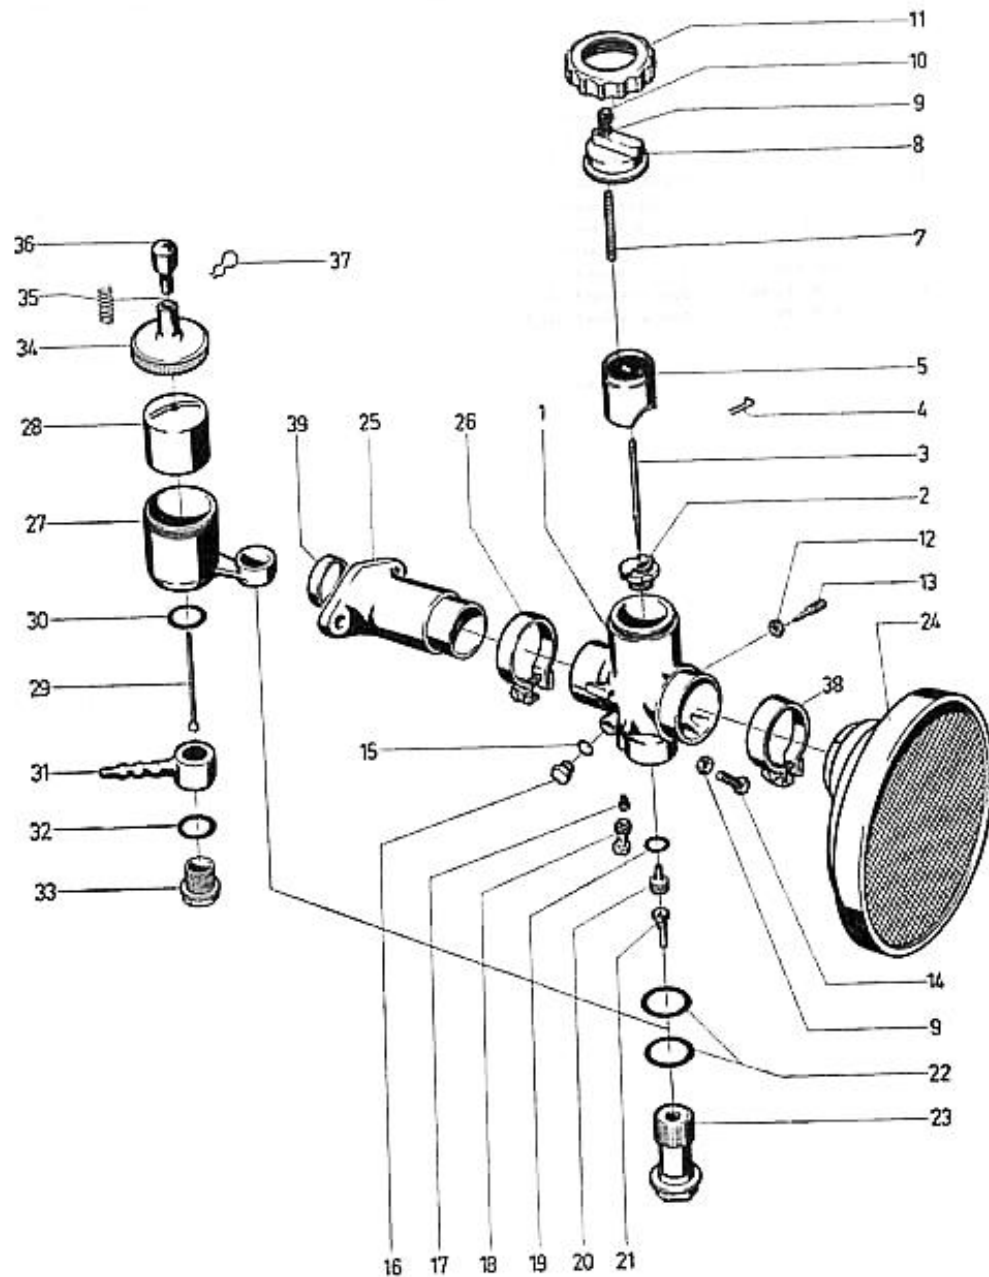


Carburettor

Picture No.	Order No.	Designation	Quantity
1	07 15 01 60	Carburettor, left BING 1/27, 5/9	1
	07 15 01 61	Carburettor, right BING 1/27, 5/10	1
	07 15 02 60	Spraying chamber body left	1
	07 15 02 61	Spraying chamber body right	1
2	01 15 12 00	Mixing chamber insert	2
3	01 15 16 00	Jet needle	2
4	01 15 17 00	Jet needle clip	2
5	02 15 27 00	Throttle slide	2
7	01 15 15 00	Slide spring	2
8	07 15 25 00	Spraying chamber cap	2
9	00 91 10 48	Hexagon nut M 6x0,75	4
10	01 15 23 00	Adjusting screw	2
11	01 15 26 00	Spraying chamber cap ring	2
12	01 15 74 00	Hexagon nut for air regulating screw	2
13	01 15 24 00	Air regulating screw	2
14	01 15 71 00	Throttle slide set hexagon screw	2
15	00 94 15 05	Packing washer	2
16	01 15 72 00	Screw plug for jet chamber	2
17	01 15 18 00	Pilot jet	2
18	01 15 21 00	Pilot air jet	2
19	00 94 15 09	Packing washer	2
20	01 15 11 00	Needle jet	2
21	01 15 22 00	Main jet	2
22	00 94 15 10	Packing washer	4
23	01 15 13 00	Jet block	2
24	00 15 60 03	Air filter	2
25	23 14 18 00	Induction tube	2
26	01 15 19 00	Clip ring for carburettor body	2
27	07 15 30 60	Float chamber body, left	1
	07 15 30 61	Float chamber body, right	1
28	01 15 31 00	Float	2
29	01 15 32 00	Float needle	2
30	00 94 15 14	Packing washer	2
31	01 15 37 00	Swivel type pipe connector	2
32	00 94 15 12	Packing washer	2
33	01 15 76 00	Strainer screw	2
34	02 15 33 00	Float chamber lid	2
35	01 15 35 00	Tickler spring	2
36	03 15 34 00	Float tickler	2
37	01 15 36 00	Clip spring	2
38	02 15 20 00	Clip ring for air filter	2
39	23 14 22 00	Centering for induction tube	2

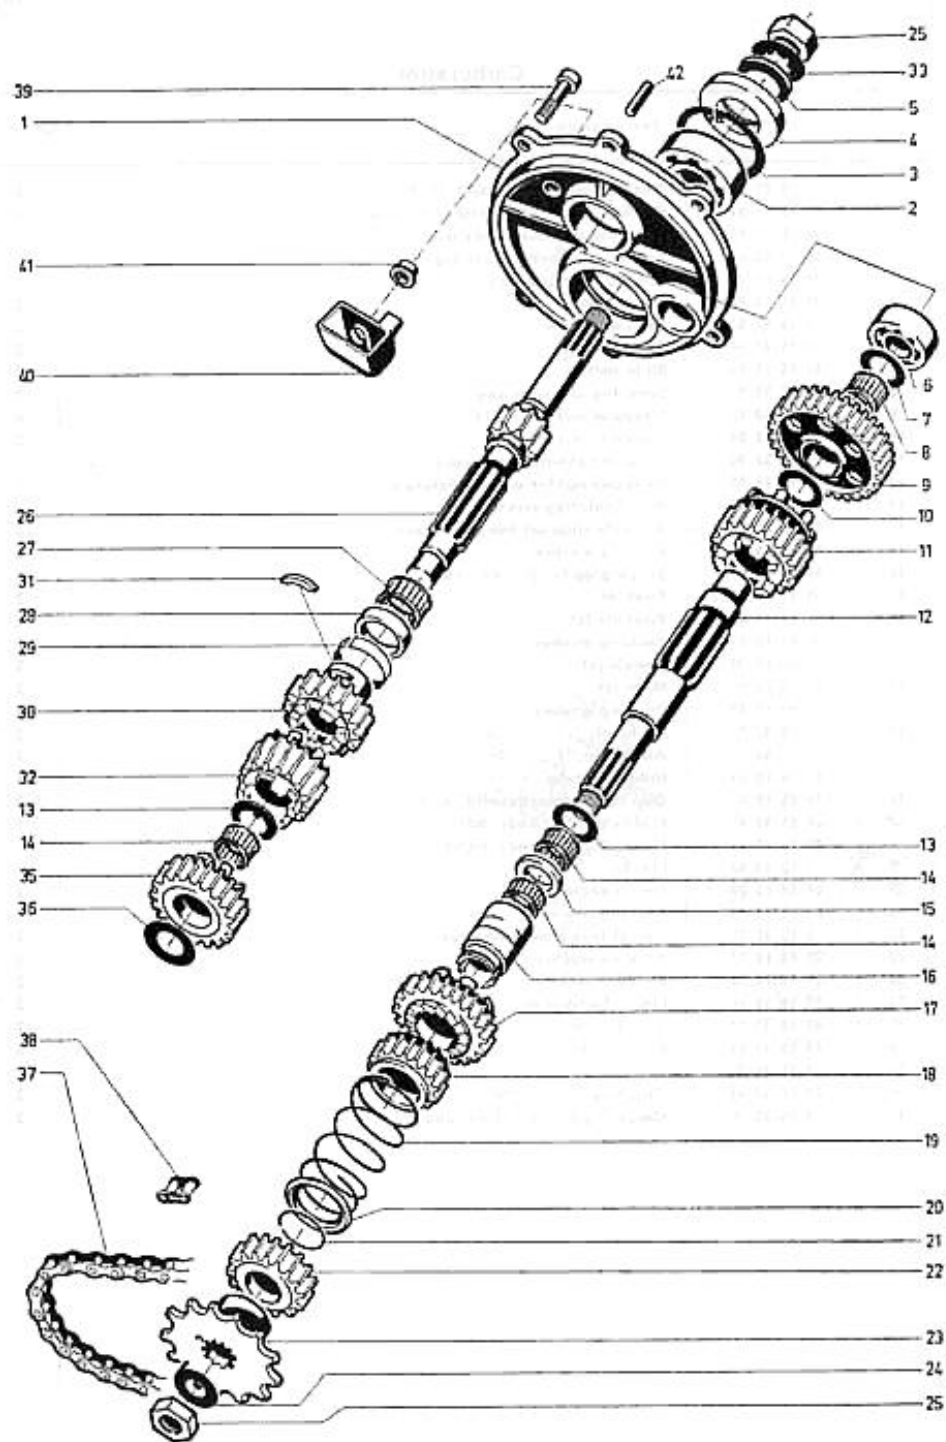

Driving Parts


Picture No.	Order No.	Designation	Quantity
1	23 11 61 00	Gear box cover	1
2	DIN 625	Ball bearing	1
3	DIN 472	Circlip	2
4	DIN 6504	Seal ring	1
5	00 92 32 37	Spacer ring	1
6	DIN 625	Ball bearing	1
7	00 91 30 35	Shim	1
8	00 95 03 01	Needle bearing	1
9	07 21 28 00	Gear pinion 33 teeth (bottom gear on layshaft)	1
10	00 91 30 36	Shim	1
11	07 21 29 00	Dog pinion 24 teeth (3rd gear on layshaft)	1
12	07 21 04 00	Layshaft	1
13	00 91 30 34	Pressure ring	2
14	00 95 03 02	Needle bearing	3
15	00 92 32 39	Spacer ring	1
16	07 21 41 00	Spacer bush	1
17	07 21 30 00	Dog pinion 28 teeth (2nd gear on layshaft)	1
18	07 24 22 00	Pinion for kickstarter	1
19	07 24 00 00	Pressure spring for kickstart pinion	1
20	07 24 65 00	Backing ring	1
21	01 24 81 00	Spring washer	1
22	07 21 23 00	Gear pinion 22 teeth (4th Gear on Layshaft)	1
23	07 21 21 00	Chain sprocket 13 teeth $\frac{1}{2} \times \frac{1}{4}$	1
24	07 36 34 00	Security plate	1
25	DIN 934	Hexagon nut	2
26	07 21 03 00	Main shaft	1
27	00 95 03 00	Needle bearing (consisting out of 2 parts)	1
28	07 21 05 00	Security ring	1
29	07 21 86 00	Spring	1
30	07 21 26 00	Dog pinion 21 teeth (3rd gear on main shaft)	1
31	07 21 80 00	Wedge	1
32	07 21 27 00	Dog pinion 18 teeth (2nd gear on main shaft)	1
33	07 24 70 60	Tongued washer for clutch	1
35	07 21 20 00	Dog pinion 24 teeth (4th gear on main axle)	1
36	00 91 58 00	Spacer washer 20,2x34x1,1	x
	00 91 59 00	Spacer washer 20,2x34x1,2	x
	00 91 60 00	Spacer washer 20,2x34x1,35	x
37	23 57 02 00	Chain $\frac{1}{2} \times \frac{1}{4}$ -- 98 links	1
38	01 57 51 00	Chain link $\frac{1}{2} \times \frac{1}{4}$	1
39	00 91 06 10	Allenhead screw M 8 x 25	4
40	23 11 71 00	Oil catch cup	1
41	00 92 24 04	Rivet	1
42	DIN 7	Cylindrical pin 8x20	1

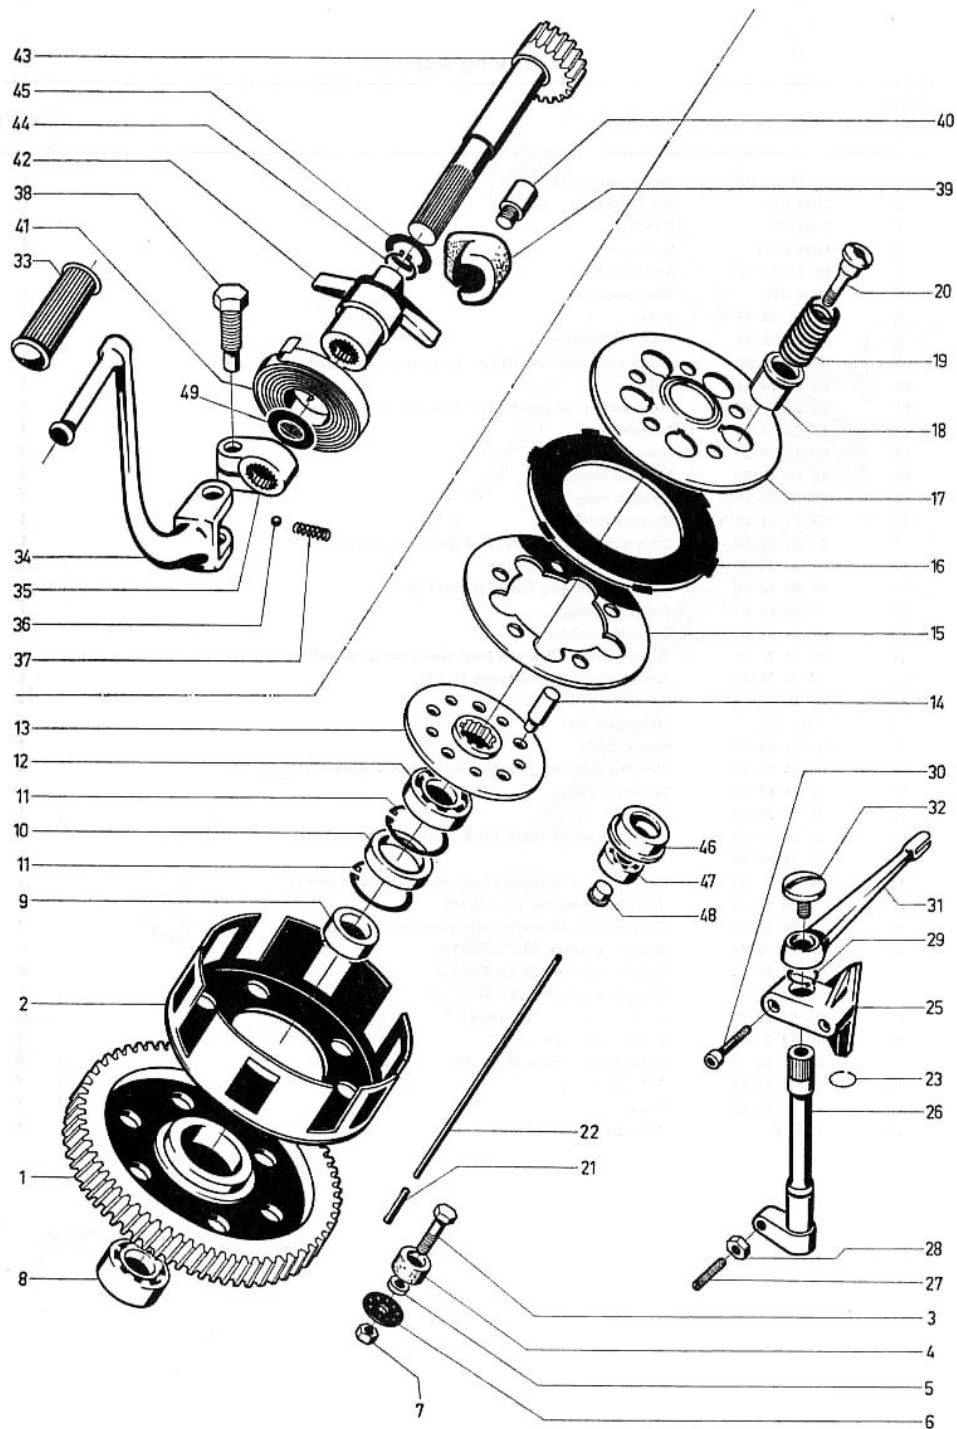

Clutch


Picture No.	Order No.	Designation	Quantity
1	07 24 21 01	Clutch sprocket	1
2	07 24 20 01	Friction plate retainer	1
3	DIN 931	Hexagon screw .M 6x20	6
4	01 24 90 01	Shock absorber rubber	6
5	01 24 36 01	Dog	6
6	01 24 66 00	Cover plate	6
7	DIN 934	Hexagon nut M 6	6
8	DIN 625	Ball bearing 6004	1
9	00 92 32 38	Spacer washer	1
10	DIN 6503	Seal ring	1
11	DIN 472	Circlip	2
12	DIN 625	Ball bearing	1
13	07 24 24 01	Clutch flange	1
14	07 24 19 00	Dog bolt	5
15	07 24 05 00	Clutch inner plate	5
16	23 24 07 00	Clutch friction plate	6
17	07 24 06 02	Clutch plug plate	1
18	07 24 43 01	Spring box	5
19	07 24 83 01	Clutch spring	5
20	07 24 73 01	Clutch spring stud	5
21	07 24 16 00	Pressure bolt	1
22	07 24 14 01	Clutch rod	1
23	DIN 9045	Spring washer	1
25	07 24 44 02	Bearing block for clutch shaft	1
26	07 24 33 00	Clutch shaft	1
27	01 24 74 00	Pressure screw	1
28	00 91 18 55	Conter nut	1
29	DIN 471	Circlip	1
30	DIN 912	Allenhead screw	2
31	07 24 31 01	Clutch lever	1
32	07 24 32 01	Screw for clutch lever	1
33	01 23 92 00	Kickstart rubber	1
34	07 23 10 01	Kickstart lever	1
35	07 23 33 00	Fastening piece	1
36	DIN 5401	Ball	1
37	00 93 26 05	Spring for kickstarter	1
38	00 91 02 10	Hexagon screw	1
39	07 24 60 00	Kickstart stop wing	1
40	07 11 12 02	Thread piece	1
41	07 23 81 00	Return spring	1
42	07 23 25 00	Kickstart stop screw with rubber damper	1
43	07 23 21 00	Kickstart segment	1
44	DIN 471	Circlip	2
45	00 91 30 38	Shim	1
46	07 24 39 00	Bearing carrier	1
47	DIN 625	Ball bearing	1
48	07 24 38 00	Clutch rod extension	1
49	00 91 35 106	Spacer washer	x

x = apply as many as needed

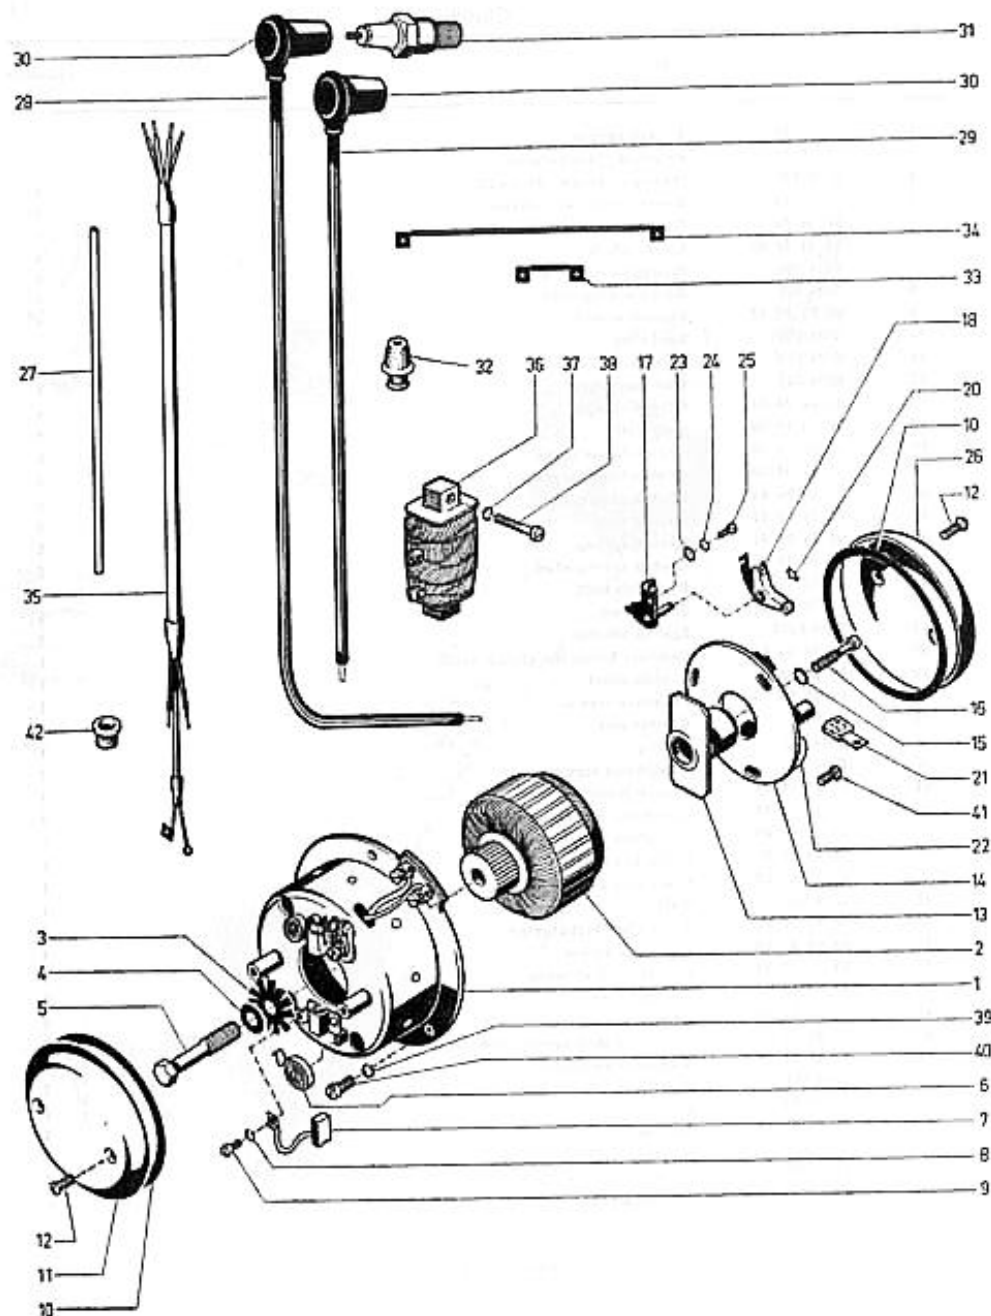


Generator

Picture No.	Order No.	Designation	Quantity
1	07 10 70 01	Generator compl.	1
2	07 17 04 01	Generator without armature	1
3	07 17 04 01	Generator armature	1
4	07 17 50 01	Air cooling wings	1
5	DIN 137	Spring washer	1
6	07 17 70 00	Hexagon nut	1
7	07 17 17 00	Pressure spring	2
8	07 17 16 00	Dynamo coil brush	2
9	DIN 127	Spring washer	2
10	DIN 84	Cylindrical screw	2
11	00 94 15 91	Gasket	2
12	07 17 02 01	Generator cap	1
13	DIN 91	Oval head screw	4
14	07 17 08 00	Centrifugal ignition timer	1
15	07 17 03 02	Contact breaker compl.	1
16	DIN 137	Spring washer	1
17	07 17 09 00	Cylindrical screw	1
18	07 17 21 00	Contact carrier	1
19	07 17 24 00	Contact breaker lever	1
20	07 17 25 00	Spring washer	1
21	07 17 22 00	Lubricating felt	1
22	07 17 20 00	Capacitor	1
23	DIN 125	Washer	1
24	DIN 127	Spring washer	1
25	DIN 84	Cylindrical screw	1
26	07 17 10 00	Contact breaker cap	1
27	00 90 45 12	Isolating tube for ignition cable (Contact breaker - ignition coils)	1
28	07 37 70 01	Ignition cable, right (high voltage)	1
29	07 37 70 02	Ignition cable, left (high voltage)	1
30	01 17 15 00	High voltage terminal for spark plug	2
31	DIN 72502	Spark plug 260 with long thread	2
32	00 94 01 09	Rubber sleeve for ignition cable	2
33	07 37 71 02	Ignition cable (low voltage)	1
34	07 37 71 01	Ignition cable (low voltage) (contact breaker - ignition coils)	1
35	07 37 31 03	Complete cable set for engine	1
36	07 17 28 00	Ignition coil	2
37	DIN 127	Spring washer B 5	4
38	DIN 84	Cylindrical screw M 5 x 25	4
39	DIN 127	Spring washer B 6	3
40	DIN 84	Cylindrical screw M 6 x 12	3
41	DIN 86	Half round screw	3
42	00 94 01 00	Rubber sleeve for cable set (engine)	1

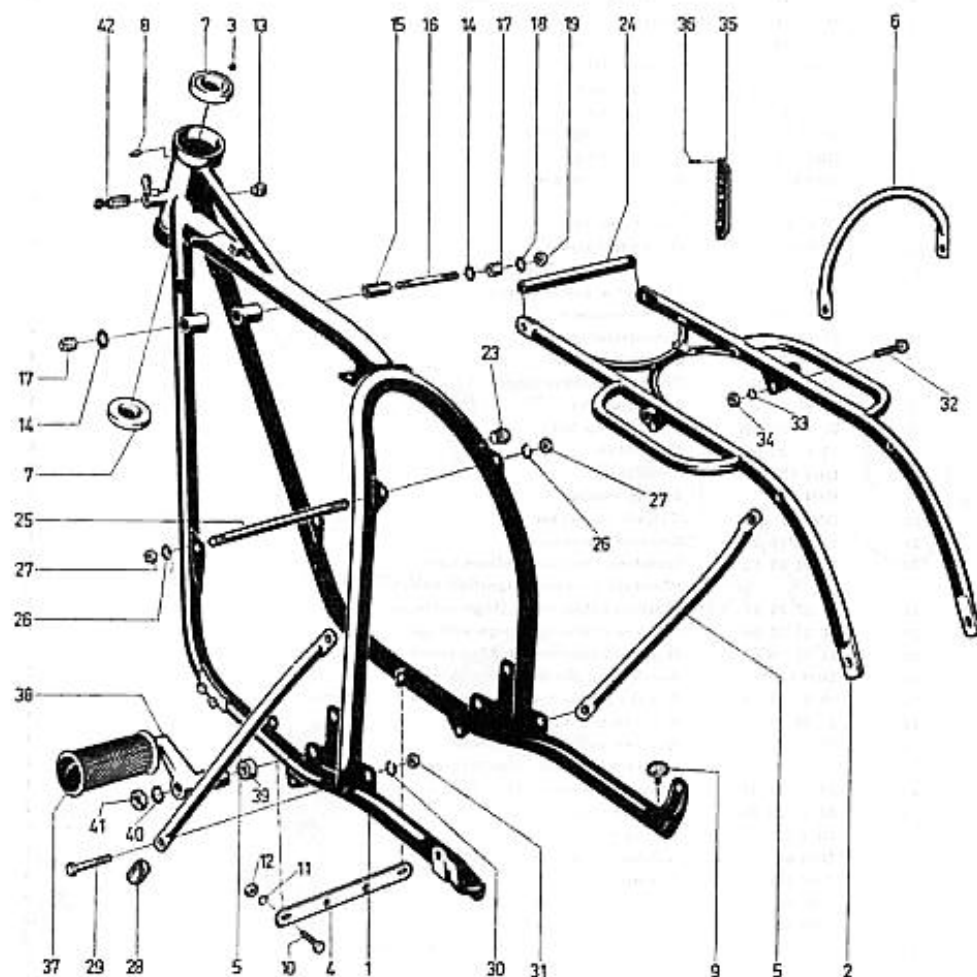

Frame and other parts

Picture No.	Order No.	Designation	Quantity
1	07 30 05 02	Front frame	1
2	07 30 06 00	Rear frame	1
3	DIN 5401	Ball 4 mm	44
4	07 31 54 02	Fastening part for intermediate silencer	1
5	07 31 30 02	Stay for rear frame	2
6	07 31 57 00	Bow tube for rear frame	1
7	01 31 34 00	Ball run ring	2
8	DIN 3402	Grease nipple	2
9	07 34 00 00	Rubber stop for swinging arm	2
10	DIN 933	Hexagon nut	2
11	DIN 127	Spring washer	2
12	DIN 934	Hexagon nut	2
13	00 94 00 20	Rubber plug	2
14	DIN 125	Washer	2
15	00 92 32 19	Spacer tube	1
16	00 91 45 07	Thread bolt	1
17	00 94 79 13	Rubber roller	2
18	00 94 79 00	Washer (Rubber)	2
19	DIN 934	Hexagon nut M 10	2
23	00 91 04 04	Screw plug	1
24	07 31 56 00	Connecting tube	1
25	00 91 45 06	Thread bolt	1
26	DIN 127	Spring washer	2
27	DIN 934	Hexagon nut	2
28	00 94 79 21	Tube sleeve	2
29	DIN 931	Hexagon screw	2
30	DIN 127	Spring washer	2
31	DIN 934	Hexagon nut	2
32	DIN 931	Hexagon screw	2
33	DIN 127	Spring washer	2
34	DIN 934	Hexagon nut	2
35	23 31 91 00	Name plate	1
36	DIN 1476	Rivet	2
37	01 22 93 01	Foot rest rubber	2
38	07 32 28 02	Foot rest	2
39	07 31 13 00	Toothened ring	2
40	DIN 127	Spring washer	2
41	DIN 934	Hexagon nut	2
42	07 81 52 00	Steering lock compl.	1

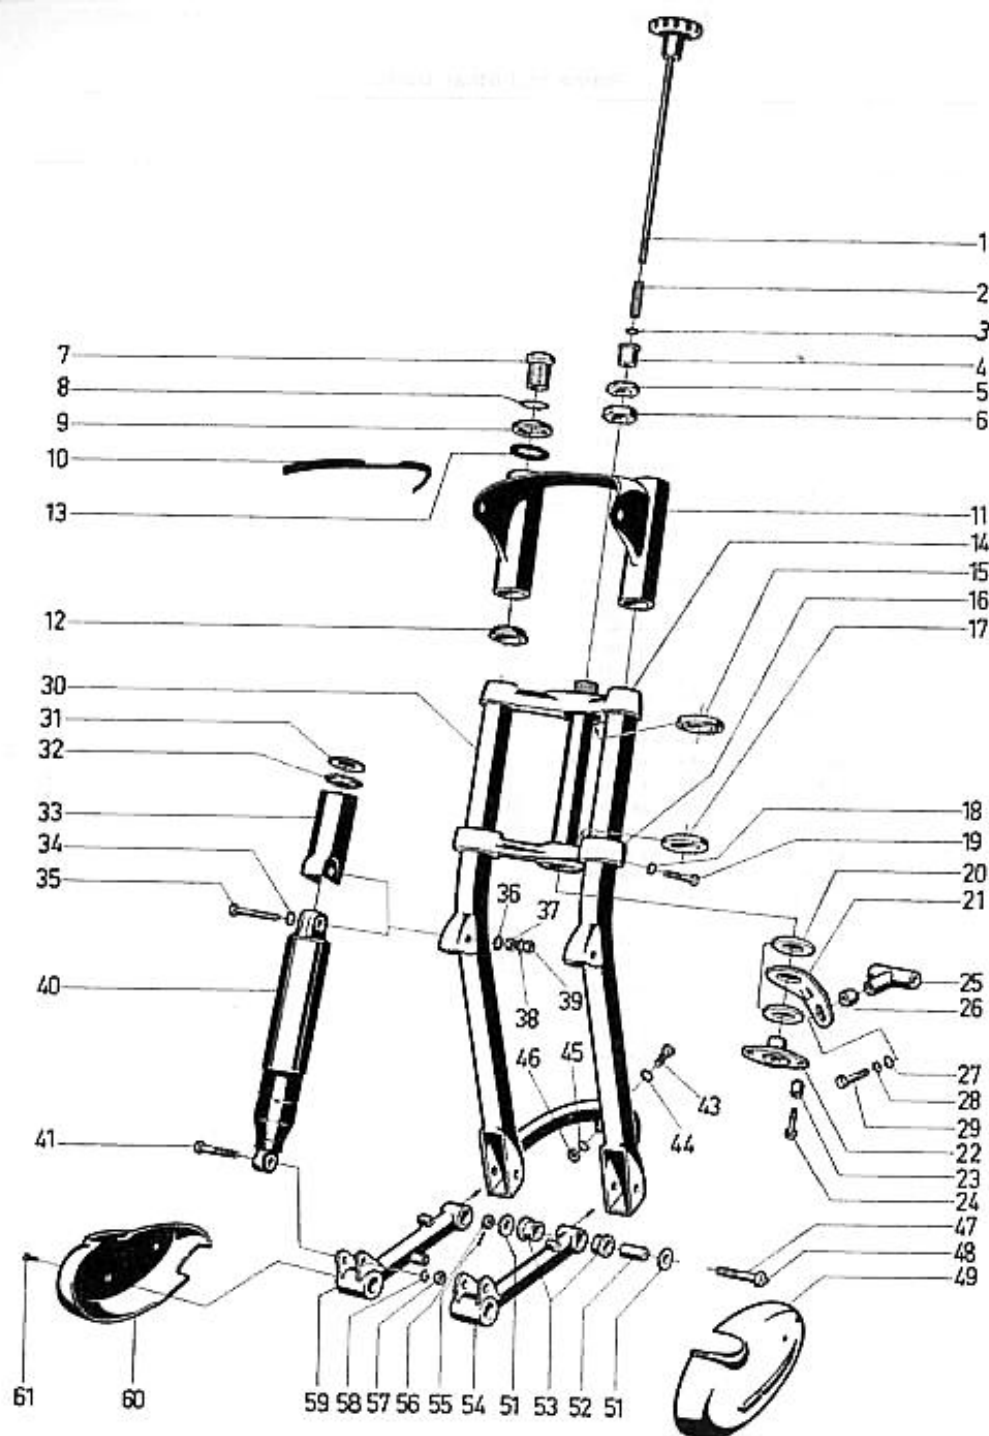


Front swinging arm suspension

Picture No.	Order No.	Designation	Quantity
	23 40 01 00	Front swinging arm fork compl.	1
1	23 40 10 00	Steering damper adjusting screw compl.	1
2	00 93 26 15	Pressure spring	1
3	00 94 15 07	Washer	1
4	01 41 41 00	Spring box	1
5	00 91 18 40	Hexagon nut	1
6	00 91 18 41	Hexagon nut	1
7	07 41 18 00	Screw plug	2
8	00 91 30 40	Washer	2
9	00 94 15 40	Packing washer	2
10	01 37 90 00	Rubber gasket	1
11	07 41 25 00	Cover tube, top with headlamp fittings	1
12	07 41 65 00	Rubber disk with collar	2
13	00 94 15 75	Packing washer	2
14	01 41 03 00	Fork top yoke	1
15	01 31 34 00	Ball run ring	1
16	07 40 03 00	Fork bottom yoke	1
17	01 31 34 01	Ball run ring	1
18	DIN 433	Washer 8,4	2
19	00 91 01 24	Hexagon screw	2
20	01 41 33 00	Friction washer	2
21	07 41 32 00	Anchor plate	1
22	01 40 15 00	Steering damper anchor flange	1
23	00 92 32 20	Spacer bush	2
24	00 91 01 33	Hexagon screw	2
25	07 31 17 00	Fastening sleeve	1
26	00 92 32 47	Spacer ring	1
27	DIN 125	Washer	1
28	DIN 127	Spring washer	1
29	DIN 931	Hexagon screw	1
30	07 41 20 04	Main tube for swinging fork	2
31	07 41 04 00	Cover ring	2
32	07 41 94 00	Rubber disk with collar	2
33	07 41 24 00	Cover tube, bottom	2
34	14 03 04 00	Washer	2
35	DIN 960	Hexagon screw	2
36	00 92 32 50	Spacer ring	2
37	DIN 934	Hexagon nut	2
38	DIN 4798	Spring washer	2
39	DIN 936	Flat Hexagon nut	2
40	07 40 60 01	Shock absorber	2
41	DIN 960	Hexagon screw	2
42	DIN 931	Hexagon screw	1
43	DIN 125	Washer	1
44	DIN 127	Spring washer	1
45	DIN 934	Hexagon nut	1
46	00 91 05 10	Hollow screw	2
47	DIN 3402	Grease nipple	2
48	07 41 70 02	Swinging arm cover, left	1
49	00 91 35 26	Spacer washer with collar	4
50	07 41 46 01	Spacer bush	2
51	07 41 45 01	Bearing bush	4
52	07 40 40 02	Swinging arm, left	1
53	DIN 94	Collar pin	2
54	DIN 937	Crowned nut M 10	2
55	DIN 936	Flat hexagon nut	2

Front swinging arm suspension

Picture No.	Order No.	Designation	Quantity
58	DIN 127	Spring washer	2
59	07 40 41 02	Swinging arm, right	2
60	07 41 70 03	Swinging arm cover, right	1
61	DIN 88	Oval head screw M 6x15	4

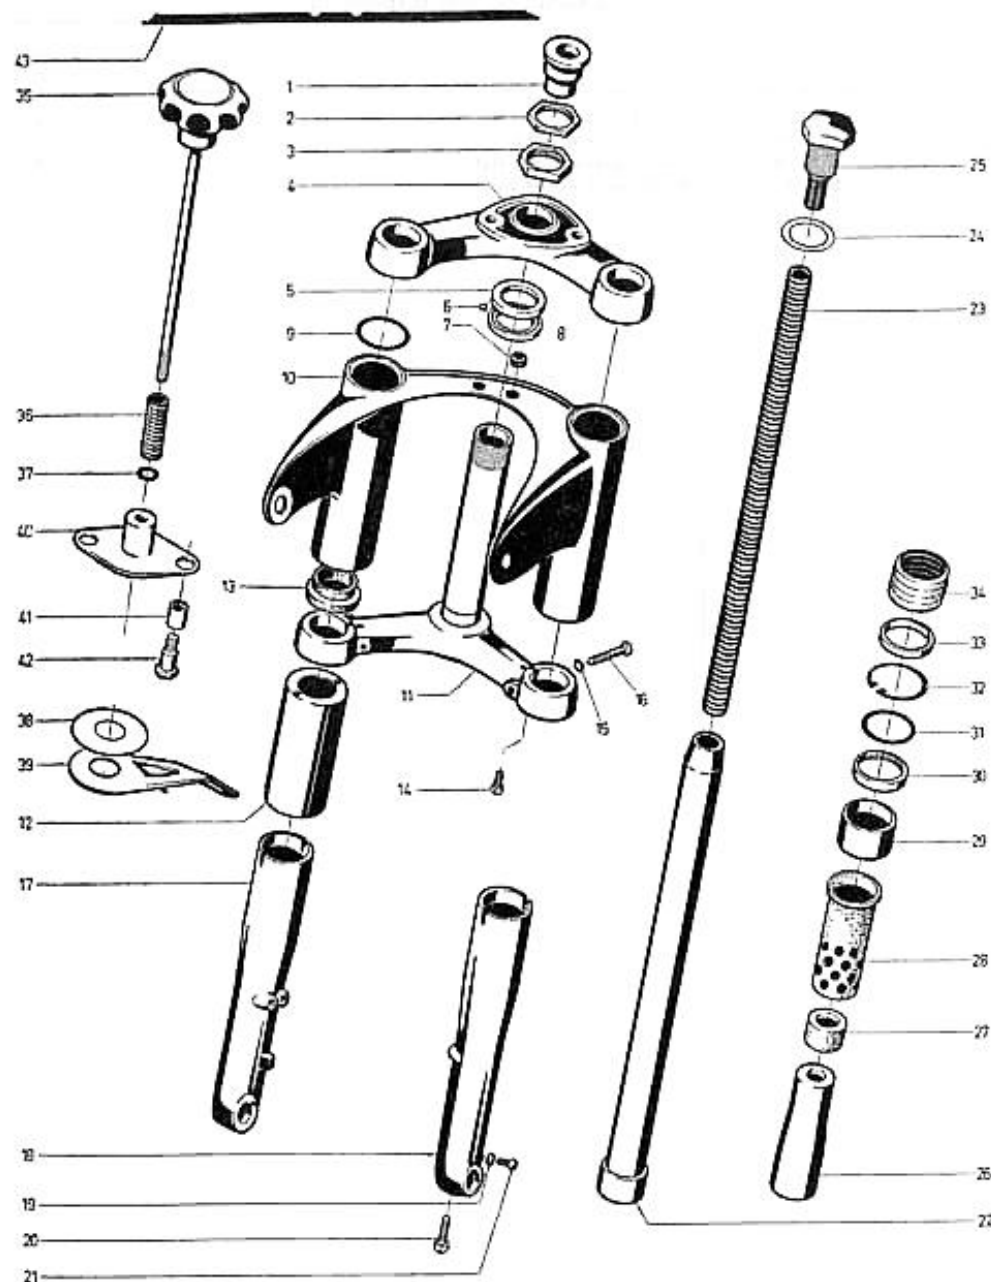


Telescopic front fork

Picture No.	Order No.	Designation	Quantity
	23 40 01 01	Telescopic front fork compl.	1
1	01 41 41 00	Spring box	1
2	00 91 10 40	Hexagon nut	1
3	00 91 10 41	Hexagon nut	1
4	01 41 03 00	Fork top yoke	1
5	01 31 34 00	Ball run ring	1
6	DIN 5401	Ball	44
7	00 94 81 10	Rubber sleeve	2
8	01 31 34 01	Ball run ring with polished inner side	1
9	00 94 15 40	Rubber gasket	2
10	01 41 25 00	Headlamp bracket (fork cover tube, top)	1
11	01 40 03 01	Fork bottom yoke	1
12	01 41 24 01	Fork cover tube, bottom	2
13	01 41 85 01	Rubber disk with collar	2
14	00 91 09 15	Cylindrical screw	4
15	DIN 125	Washer 0,4	2
16	03 91 01 24	Hexagon screw	2
17	01 41 20 00	Fork guide tube, right	1
18	01 41 27 00	Fork guide tube, left	1
19	00 94 15 03	Packing washer (fiber)	2
20	00 91 09 40	Cylindrical screw	2
21	DIN 06	Half round screw	2
22	01 40 14 00	Main tube	2
23	01 41 03 02	Spring	2
24	00 91 30 60	Washer	2
25	01 40 16 02	Screw plug	2
26	01 41 23 02	Prop tube	2
27	00 94 79 25	Rubber roller	2
28	01 41 04 03	Damper tube	2
29	01 41 42 01	Guide bushing	2
30	00 94 86 02	Seal ring	2
31	00 91 30 69	Washer	2
32	00 91 80 10	Circlip	2
33	03 41 02 01	Sleeve	2
34	03 43 92 00	Bellow type rubber sleeve	2
35	23 40 10 00	Steering damper adjusting screw	1
36	00 93 26 15	Pressure spring	1
37	00 94 15 07	Leather washer	1
38	01 41 33 00	Friction washer	2
39	07 41 32 00	Anchor plate	1
40	01 40 15 00	Steering damper anchor flange compl.	1
41	00 92 32 20	Spacer bush	2
42	00 91 01 23	Hexagon screw	2
43	01 37 90 00	Rubber gasket	1
Parts which are used if the motorcycle in question is equipped with a telescopic front fork:			
07 33 01 04	Front fender		1
07 33 14 00	Stay for front fender		2
DIN 933	Hexagon screw M 7 x 12	Used to fasten fender to Guide tube	4
DIN 127	Spring ring B 7		4
DIN 931	Hexagon screw M 7 x 18	Used to fasten stay to G. T.	2
DIN 127	Spring washer B 7		2
00 91 01 10	Hexagon screw M 6 x 13	Used to fasten stay to front fender	2
DIN 127	Spring washer B 6		2
DIN 934	Hexagon nut M 6		2

Telescopic front fork


Picture No.	Order No.	Designation	Quantity
	23 40 30 01	Front brake control cable, compl.	1
	DIN 86	Half round screw M 5x10	1
	DIN 125	Washer 5,3	1
	DIN 127	Spring washer B 5	1
	DIN 934	Hexagon nut M 5	1
		Used to fasten cable fitting to front fender	

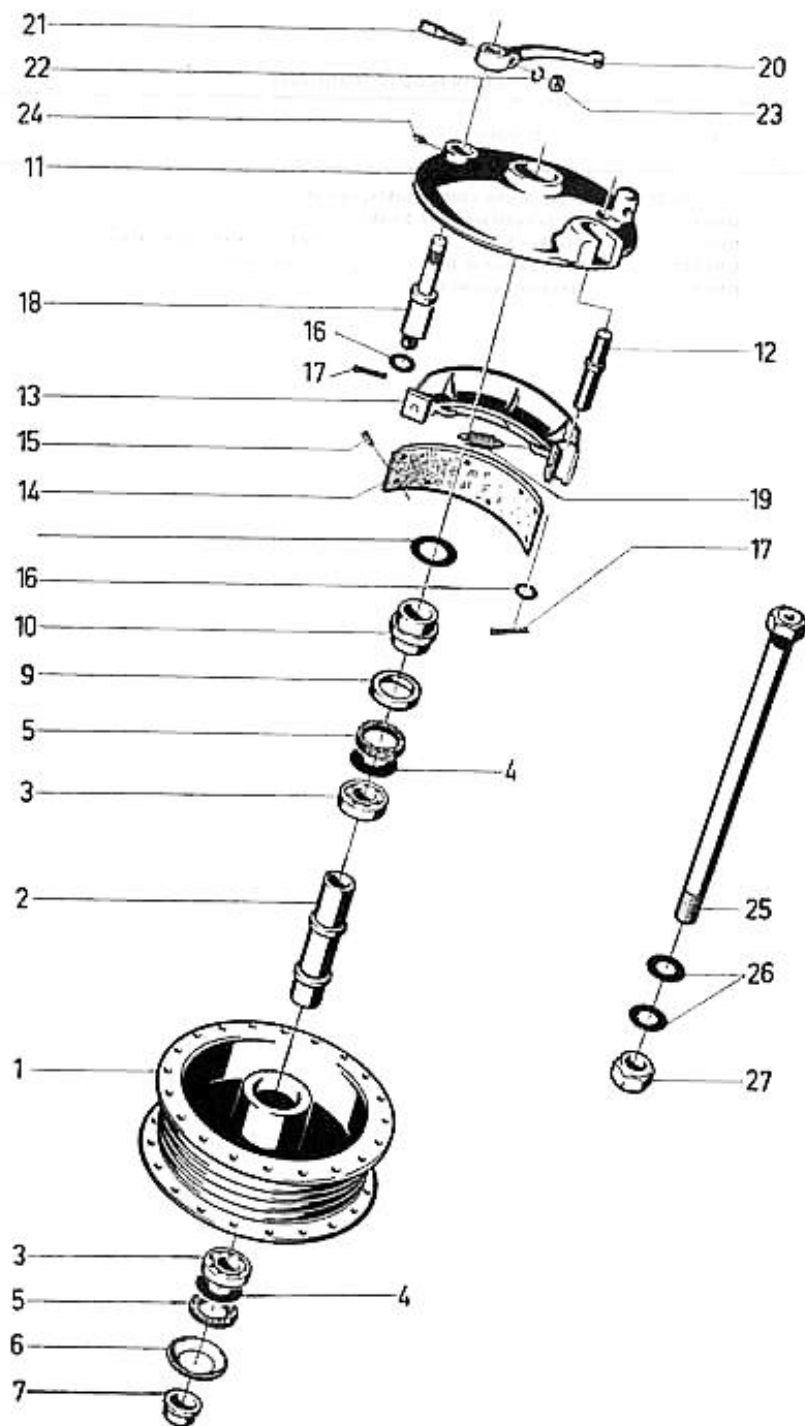

Front wheel

Picture No.	Order No.	Designation	Quantity
	07 50 10 00	Front wheel compl.	1
	07 51 02 03	Wheel rim, 40 holes	1
	07 51 07 01	Spoke, inner	20
	07 51 08 01	Spoke, outer	20
	01 51 09 00	Nipple	40
	DIN 7802	Tyre 3,25x18	1
	DIN 7802	Tube E 10	1
	DIN 7802	Wheel rim strap 18x28	1
1	07 50 14 00	Hub housing with brake ring	1
2	07 51 12 00	Hollow axle	1
3	DIN 625	Ball bearing	2
4	00 91 30 27	Washer	2
5	00 94 15 40	Felt washer	2
6	07 51 60 00	Dust cover	1
7	07 51 61 00	Spacer ring	1
9	01 57 60 01	Dust cover	2
10	07 51 22 00	Spacer	1
11	07 53 02 00	Brake cover	1
12	07 53 11 00	Brake shoe bolt	1
13	07 50 33 00	Brake shoe with steel insert	2
14	07 53 08 00	Brake lining	2
15	00 92 24 03	Rivet	16
16	00 91 30 23	Washer	4
17	DIN 94	Cotter pin	2
18	07 53 19 00	Brake cam	1
19	07 53 80 00	Return spring	2
20	07 53 23 01	Brake lever	1
21	01 22 72 00	Clamping screw	1
22	DIN 127	Spring washer	1
23	DIN 934	Hexagon nut	1
24	DIN 3402	Grease nipple	1
25	01 50 15 00	Knock out spindle compl.	1
26	00 91 30 51	Washer	2
27	01 51 75 00	Hexagon nut	1
28	00 91 35 31	Spacer washer	x
	00 91 35 32	Spacer washer	x
	00 91 35 33	Spacer washer	x
	00 91 35 34	Spacer washer	x

x = apply as many as needed.

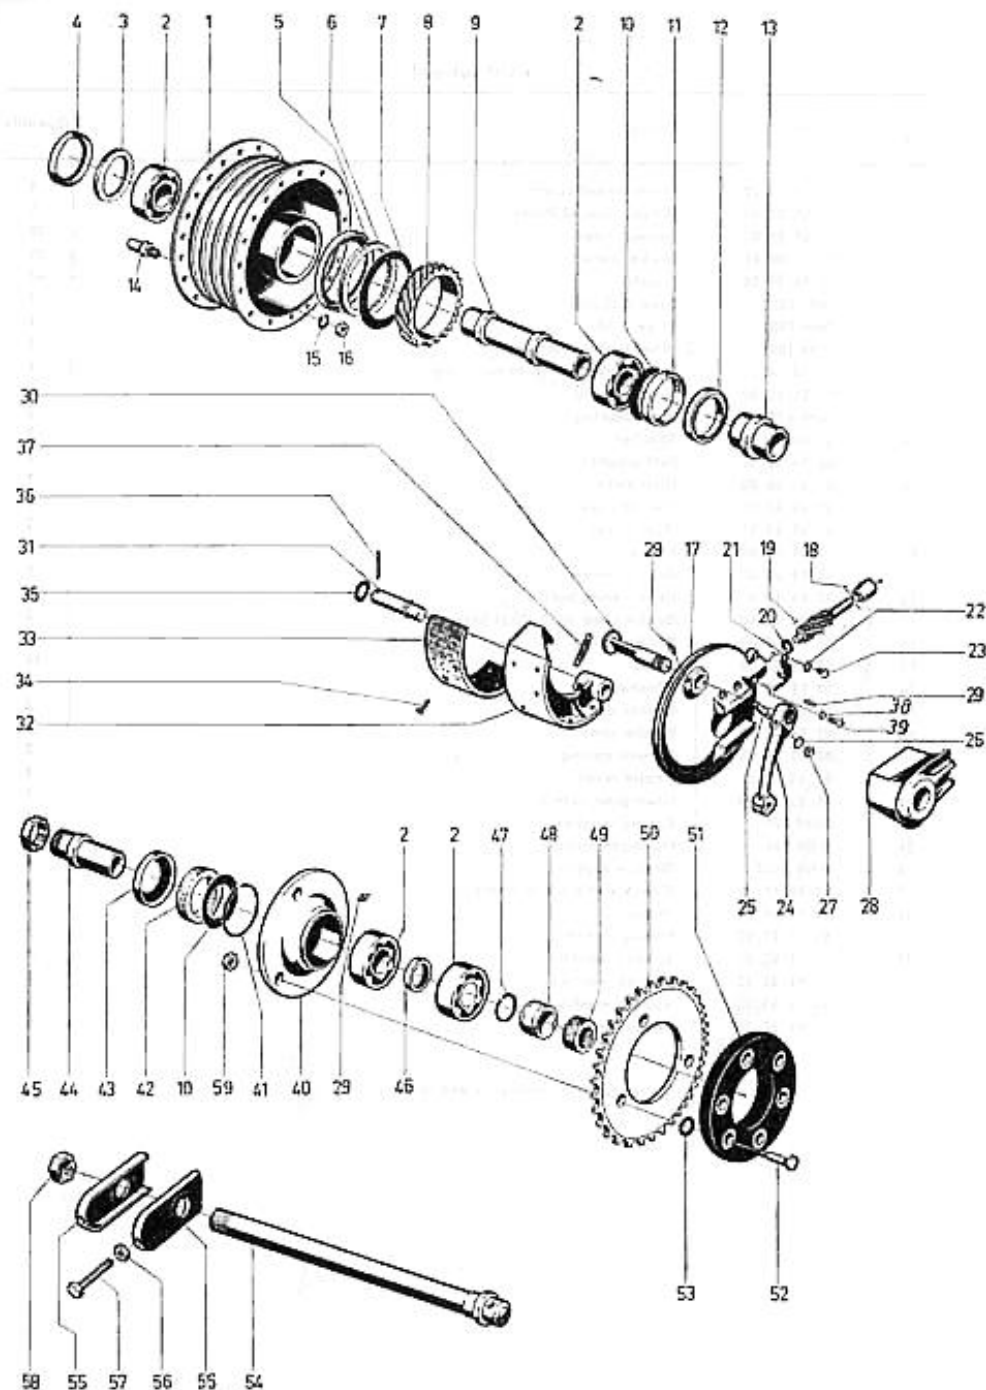


Rear wheel

Picture No.	Order No.	Designation	Quantity
	07 50 20 01	Rear wheel, compl.	1
	07 51 02 03	Wheel rim, 40 holes	1
	07 52 07 01	Spoke, reinforced, inner	20
	07 52 08 01	Spoke, reinforced, outer	20
	01 51 09 00	Nipple	40
	DIN 7802	Tyre 3,5x18	1
	DIN 7802	Tube E 18	1
	DIN 7802	Wheel rim strap 18x28	1
1	07 50 24 00	Hub housing with brake ring	1
2	DIN 625	Ball bearing	4
3	00 94 15 80	Felt washer	1
4	01 52 61 00	Dust cover	1
5	01 52 60 00	Dust cover	1
6	00 94 15 90	Felt washer	1
7	00 91 30 90	Washer	1
8	01 57 22 01	Speedometer transmission pinion	1
	00 92 11 09	Cylindrical pin 4x12 for speedometer transmission pinion	1
9	01 52 12 01	Hollow axle	1
10	00 91 30 27	Washer	2
11	00 94 15 60	Felt washer	1
12	01 57 60 01	Dust cover	1
13	01 52 22 01	Spacer	1
14	07 52 11 01	Anchor pin for shock absorber disk	3
15	DIN 127	Spring washer	3
16	DIN 934	Flat hexagon nut	3
17	07 53 01 01	Brake cover	1
18	01 57 41 00	Bushing for drive spindle	1
19	07 57 18 00	Speedometer drive spindle	1
20	00 91 30 11	Washer	1
21	01 50 71 00	Spring for speedometer flexible shaft	1
22	DIN 127	Spring washer B 5	1
23	DIN 86	Half round screw	1
24	07 53 22 00	Brake lever	1
25	01 22 72 00	Clamping screw	1
26	DIN 127	Spring washer	1
27	DIN 934	Hexagon nut	1
28	00 36 45 00	Brake anchor	1
29	DIN 3402	Grease nipple	3
30	07 53 12 00	Brake cam	1
31	07 53 13 00	Brake shoe spindle	1
	07 50 32 00	Brake shoe compl.	2
32	07 53 05 00	Brake shoe	2
33	07 53 08 00	Brake lining	2
34	00 92 24 03	Rivet (Aluminium)	16
35	00 91 30 23	Washer	4
36	DIN 94	Cotter pin	2
37	07 53 80 00	Return spring	2
38	DIN 127	Spring washer	1
39	DIN 84	Cylindrical screw	1
40	01 57 04 00	Sprocket flange	1
41	01 57 81 00	Circlip	1
42	00 94 15 18	Felt washer	1
43	07 57 60 00	Dust cover	1
44	07 57 30 00	Carrier tube	1
45	00 91 18 35	Hexagon nut	1
46	00 92 32 30	Spacer ring	1


Rear wheel

Picture No.	Order No.	Designation	Quantity
47	DIN 9045	Spring washer	1
48	01 57 31 00	Clamping piece	1
49	00 94 15 61	Fell washer	1
50	23 57 20 00	Rear wheel sprocket 39 teeth $\frac{1}{4} \times \frac{1}{4}$	1
51	01 57 24 00	Rubber shock absorber disk	1
52	01 57 14 03	Thread bolt	3
53	DIN 125	Washer	3
54	01 52 15 01	Knock out spindle	1
55	07 36 00 01	Chain adjuster	2
56	DIN 934	Hexagon nut	2
57	DIN 933	Hexagon screw	2
58	DIN 934	Hexagon nut	1
59	DIN 936	Flat hexagon nut	3
	00 91 35 50	Spacer washer	x
		x == apply as many as needed.	

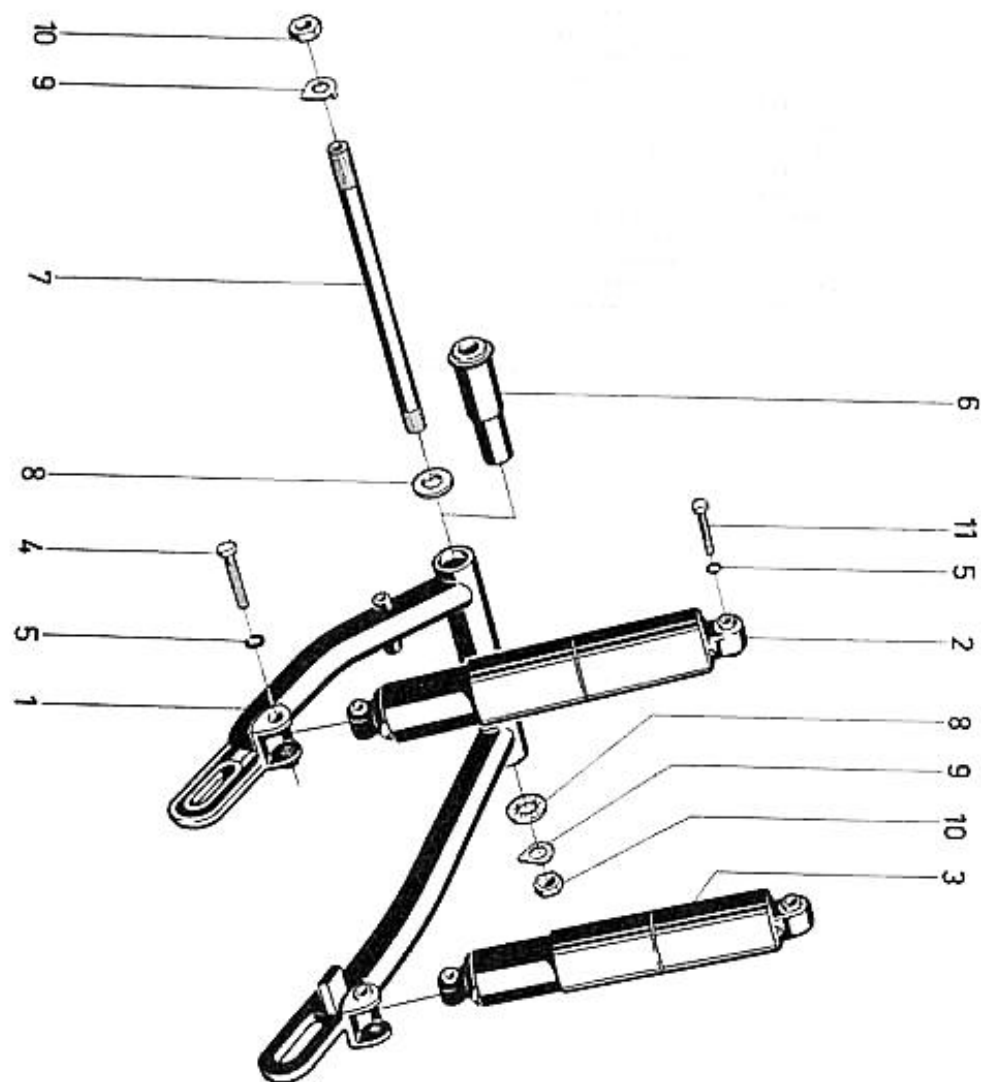


Swinging arm suspension

Picture No.	Order No.	Designation	Quantity
1	07 30 25 00	Swinging arm compl.	1
2	07 30 65 04	Shock absorber, left	1
3	07 30 65 05	Shock absorber, right	1
4	DIN 931	Hexagon screw	2
5	DIN 127	Spring washer	4
6	07 36 31 03	Silentbloc	2
7	07 36 33 00	Thread bolt	1
8	07 36 32 01	Friction washer	2
9	07 36 34 00	Security plate	2
10	00 91 18 36	Hexagon nut	2
11	DIN 931	Hexagon screw	2

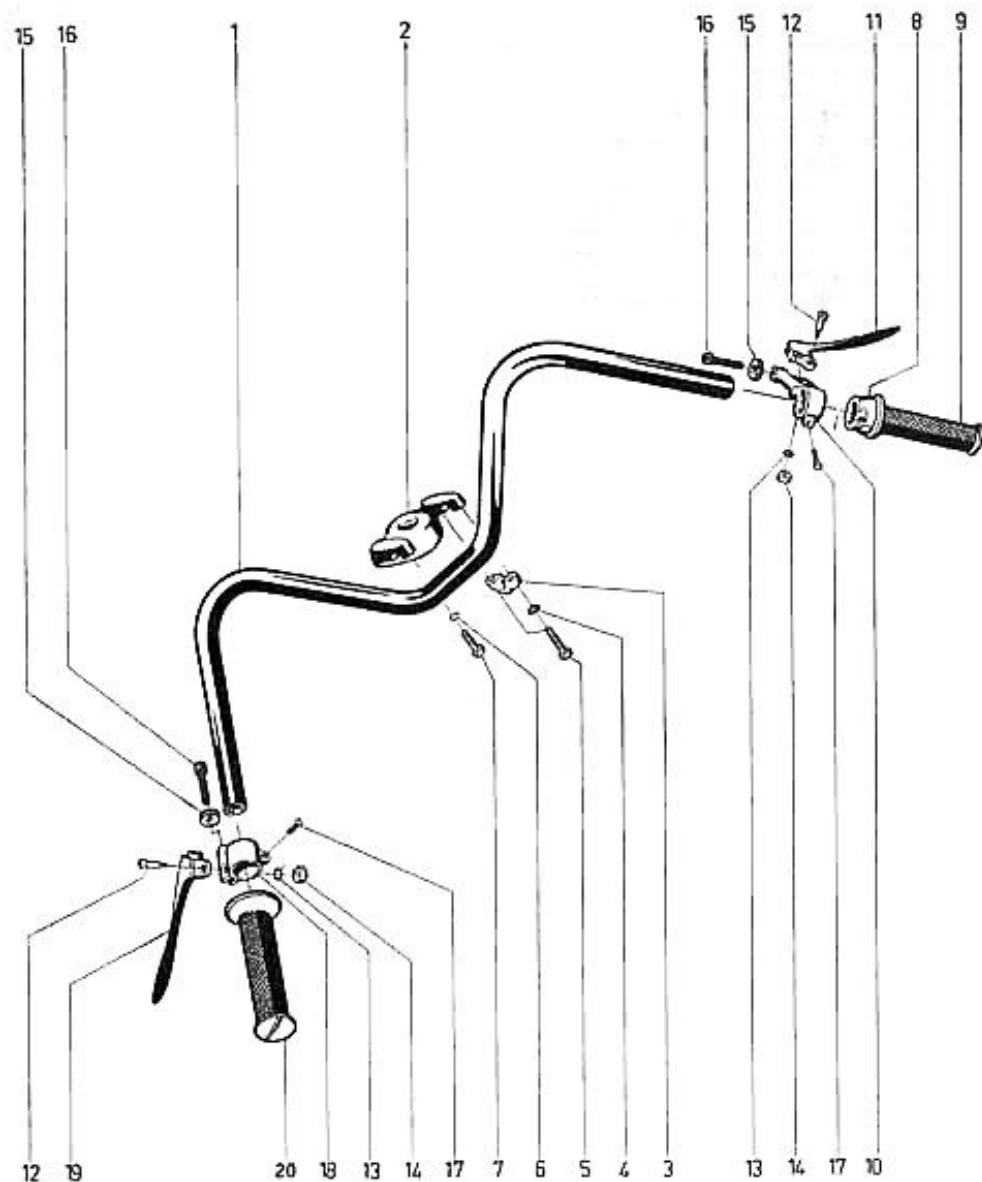


Handlebar

Picture No.	Order No.	Designation	Quantity
1	23 42 10 00	Handlebar	1
2	01 42 08 00	Handlebar - stay	1
3	01 42 09 02	Handlebar stay clip	2
4	DIN 125	Washer	4
5	DIN 931	Hexagon screw	4
6	DIN 127	Spring washer	2
7	DIN 931	Hexagon screw	2
8	07 42 16 00	Throttle twist grip, compl.	1
9	02 42 18 00	Twist grip rubber	1
	02 42 17 00	Twist grip tube with rubber	1
	02 42 26 00	Twist grip body, top part	1
	07 42 25 00	Twist grip body, bottom part	1
	07 42 50 00	Twist grip cable steady	1
	02 42 23 00	Oval head screw for twist grip body	2
	07 42 12 00	Brake lever compl.	1
10	07 42 13 00	Brake lever hinge	1
11	07 42 42 00	Brake lever	1
12	02 42 35 00	Lever screw	2
13	DIN 6797	Spring washer	2
14	DIN 934	Hexagon nut	2
15	07 42 61 00	Adjusting nut	2
16	07 42 62 00	Adjusting screw	2
17	07 42 28 00	Oval head screw for brake lever hinge	2
	07 42 14 00	Clutch lever compl.	1
18	07 42 15 00	Clutch lever hinge	1
19	07 42 44 00	Clutch lever	1
20	02 42 24 00	Dummy grip	1

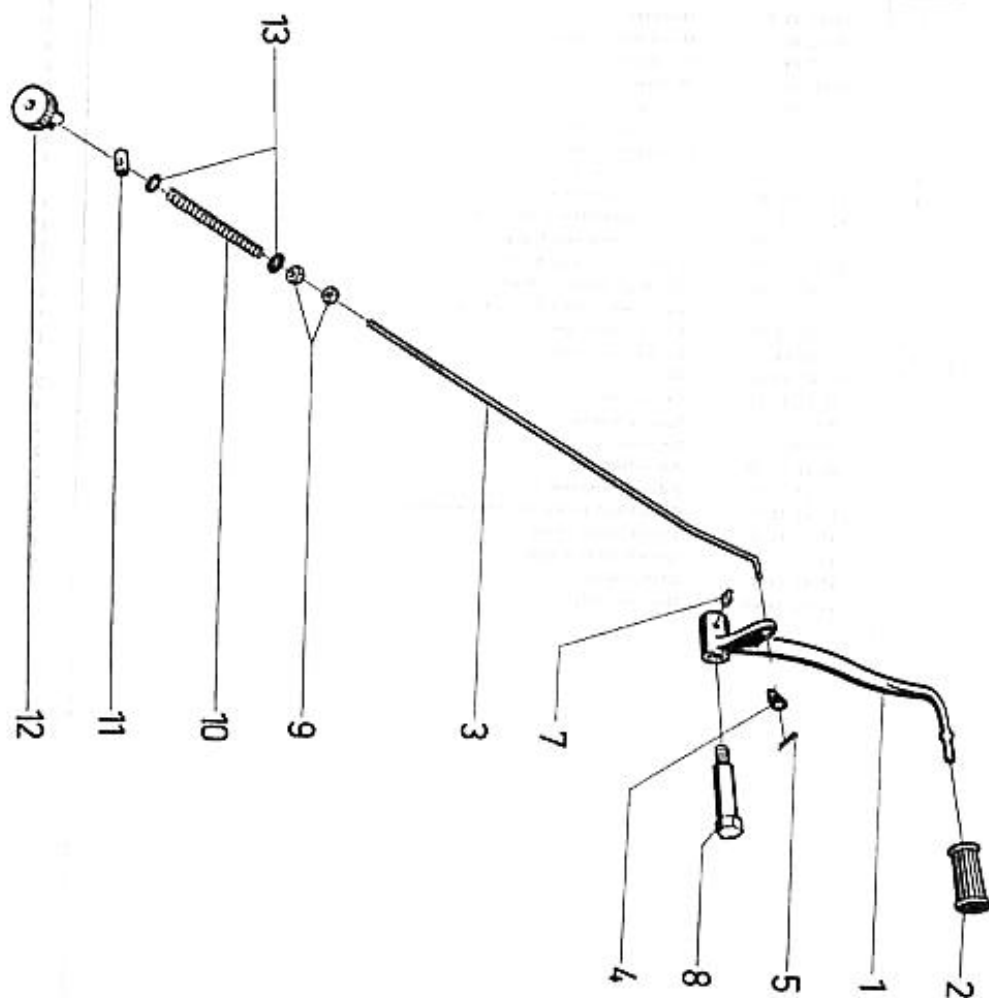


Foot brake lever

Picture No.	Order No.	Designation	Quantity
1	07 50 40 00	Foot brake lever with bushing	1
2	01 53 90 02	Rubber knob	1
3	07 53 18 01	Brake rod	1
4	07 53 30 00	Spacer	1
5	DIN 94	Collar pin	1
7	DIN 3402	Grease nipple	1
8	07 53 09 02	Brake lever bolt	1
9	DIN 934	Hexagon nut	2
10	00 93 26 08	Pressure spring	1
11	07 53 10 00	Brake lever bolt	1
12	07 53 20 00	Adjusting nut	1
13	DIN 125	Washer 7,6	2

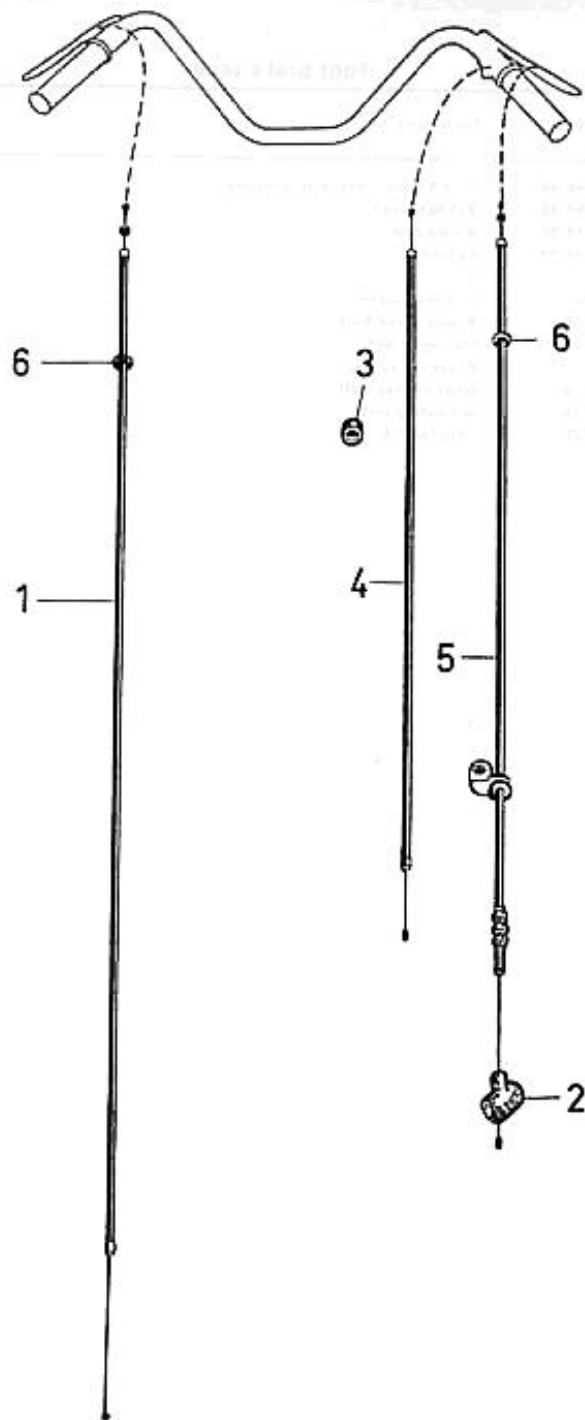


Bowden cables

Picture No.	Order No.	Designation	Quantity
1	23 40 32 00	Clutch control cable	1
2	07 53 91 00	Protection cover for front wheel brake lever	1
3	00 94 81 00	Rubber bush	1
4	23 43 06 00	Throttle control cable	2
5	23 40 30 00	Front brake control cable	1
6	00 94 81 10	Rubber sleeve	2

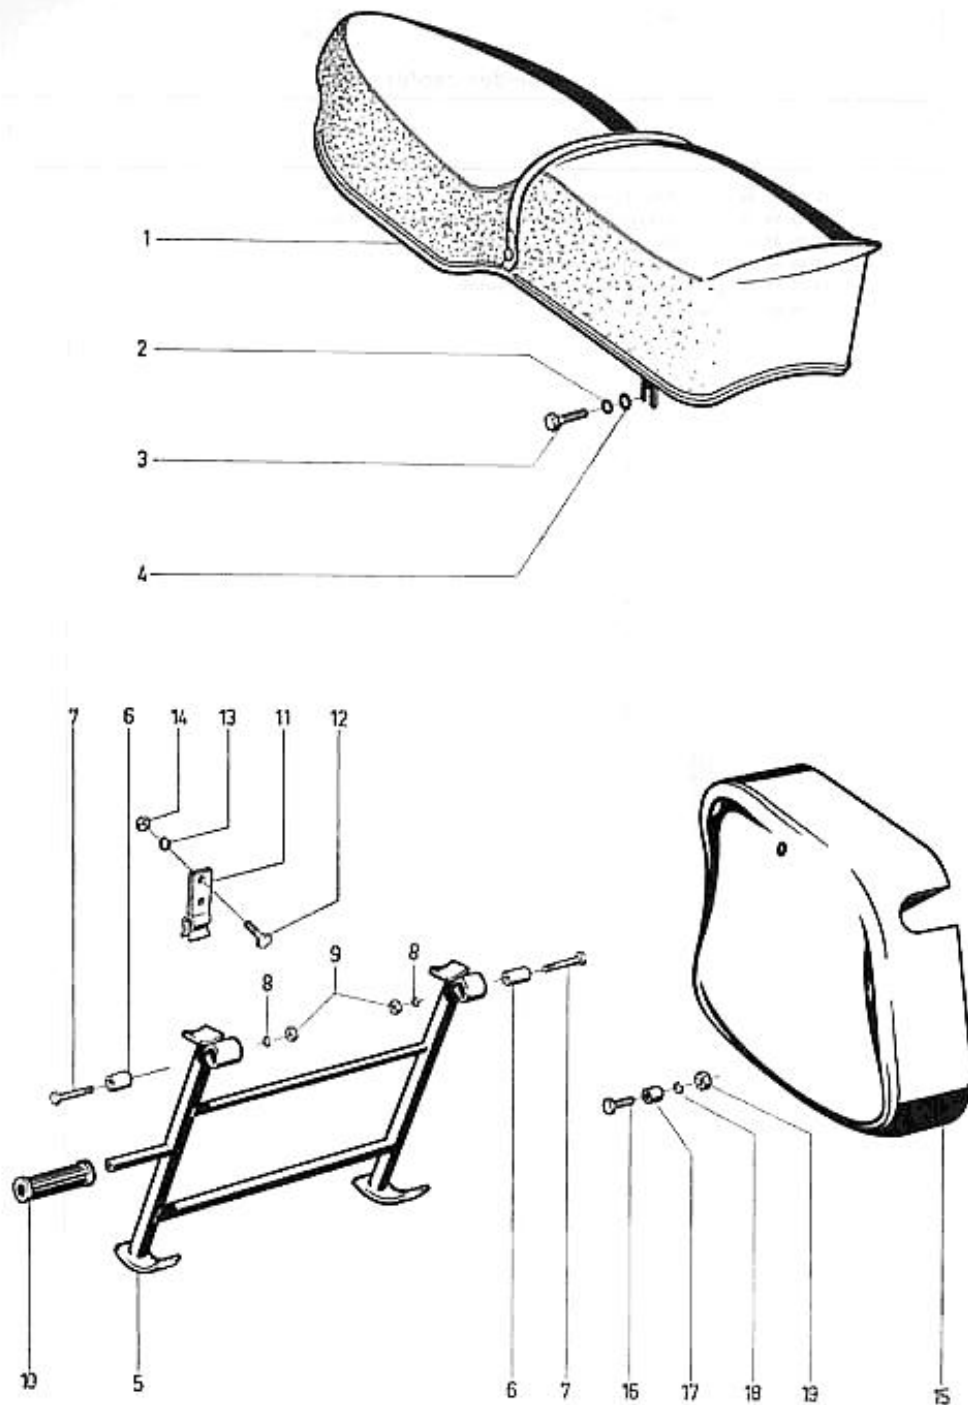

Dual Seat, Tool box, Center stand


Picture No.	Order No.	Designation	Quantity
1	07 32 20 00	Dual seat	1
2	DIN 4798	Spring washer	2
3	DIN 933	Hexagon screw	2
4	00 91 30 47	Washer	2
5	07 30 22 01	Center stand	1
6	00 92 32 00	Spacer bush	2
7	DIN 931	Hexagon screw	2
8	DIN 127	Spring washer	2
9	DIN 934	Hexagon nut	2
10	01 23 92 00	Rubber piece	1
11	07 32 00 00	Spring leaf	2
12	DIN 933	Hexagon screw	2
13	DIN 127	Spring washer	2
14	DIN 934	Hexagon nut	2
15	07 81 01 00	Tool box, left	1
	07 01 02 00	Tool box, right	1
16	DIN 931	Hexagon screw	7
17	00 92 32 05	Spacer ring	7
18	DIN 127	Spring washer	7
19	DIN 934	Hexagon nut	7

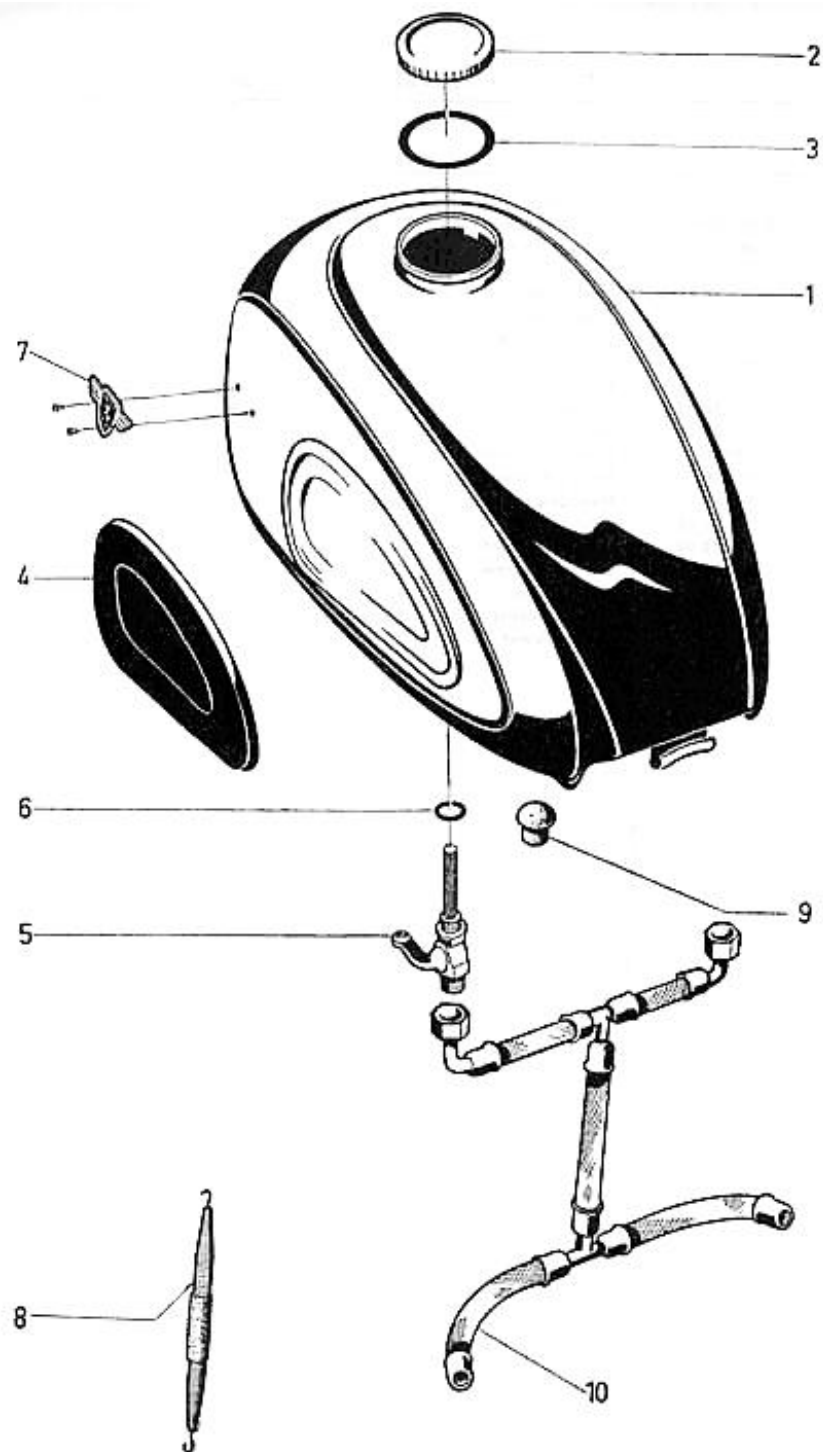

Fuel Tank


Picture No.	Order No.	Designation	Quantity
1	23 34 01 00	Fuel tank	1
2	DIN 73400	Plug cover	1
3	DIN 7603	Plug cover gasket	1
4	00 34 21 00	Knee grip, left	1
	00 34 22 00	Knee grip, right	1
5	DIN 73376	Fuel tap	2
6	DIN 7603	Packing washer	×
7	23 34 15 00	Tank emblem compl.	2
8	23 34 03 00	Fastening spring	1
9	00 94 80 20	Rubber plug	2
10	07 34 30 01	Fuel pipe	1

× = Mount packing washers of different sizes if necessary

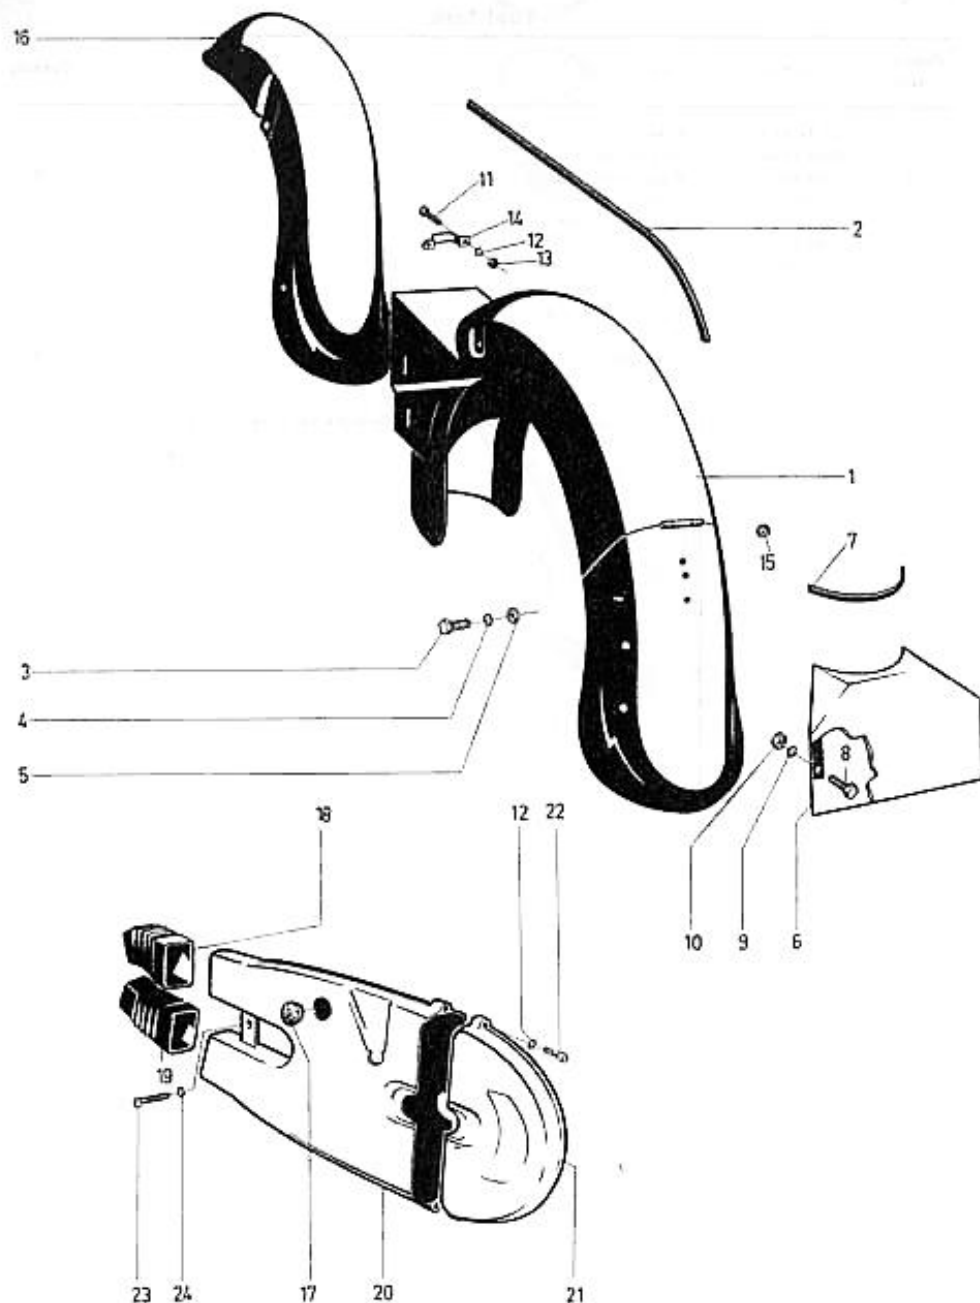


Fenders — Chain guard

Picture No.	Order No.	Designation	Quantity
1	23 30 51 01	Rear fender	1
2	07 33 90 00	Rubber damper strap	2
3	DIN 931	Hexagon screw	2
4	DIN 125	Washer	2
5	DIN 934	Hexagon nut	2
6	07 03 37 00	Number plate fastening part	1
7	07 03 90 00	Rubber damper strap	1
8	00 91 01 10	Hexagon screw	4
9	DIN 127	Spring washer	4
10	DIN 934	Hexagon nut	4
11	DIN 84	Half round screw	2
12	DIN 127	Spring washer	4
13	DIN 934	Hexagon nut	2
14	07 37 22 01	Battery mounting strap fastener	1
15	00 94 01 10	Rubber sleeve	2
16	07 33 01 03	Front fender for swinging arm fork	1
17	07 57 06 02	Chain guard compl.	1
18	07 57 08 00	Plug cover	1
19	07 50 85 00	Bellow type rubber cover, top compl.	1
20	07 50 84 00	Bellow type rubber cover, bottom	1
21	07 57 15 00	Chain guard, front part	1
22	07 57 16 00	Chain guard, rear part	1
23	DIN 84	Cylindrical screw	2
24	DIN 84	Half round screw	1
	DIN 127	Spring washer	1

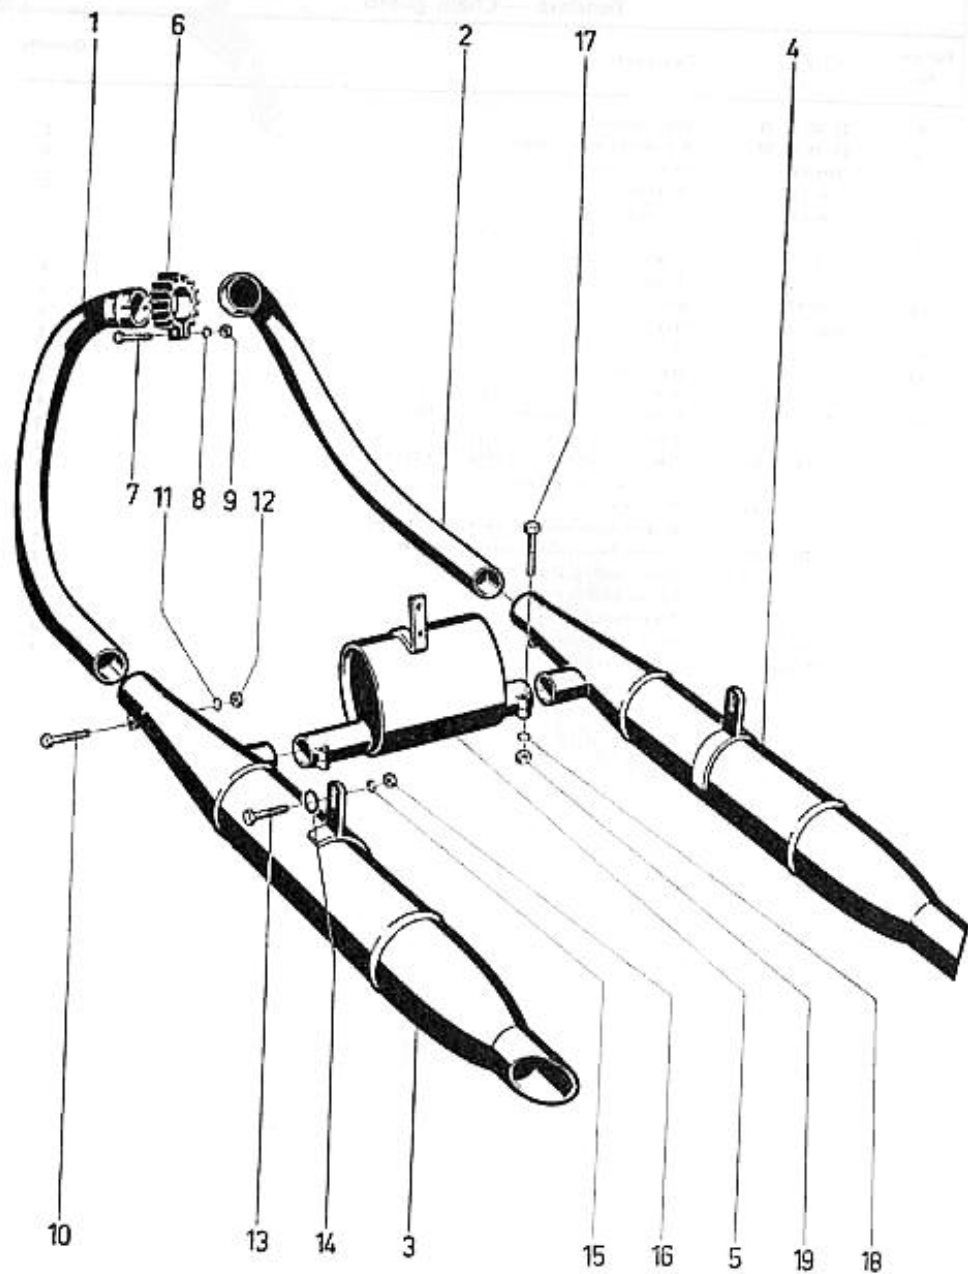


Exhaust pipes, mufflers

Picture No.	Order No.	Designation	Quantity
1	07 35 01 01	Exhaust pipe, left	1
2	07 35 02 01	Exhaust pipe, right	1
3	07 35 05 01	Muffler, left	1
4	07 35 06 01	Muffler, right	1
5	07 35 15 03	Intermediate silencer	1
6	01 35 03 00	Exhaust pipe flanged collar	1
7	DIN 931	Hexagon screw	2
8	DIN 127	Spring washer	2
9	DIN 934	Hexagon nut	2
10	DIN 931	Hexagon screw	2
11	DIN 127	Spring washer	2
12	DIN 934	Hexagon nut	2
13	DIN 931	Hexagon screw	2
14	DIN 125	Washer	2
15	DIN 127	Spring washer	2
16	DIN 934	Hexagon nut	2
17	DIN 931	Hexagon screw	2
18	DIN 127	Spring washer	2
19	DIN 934	Hexagon nut	2

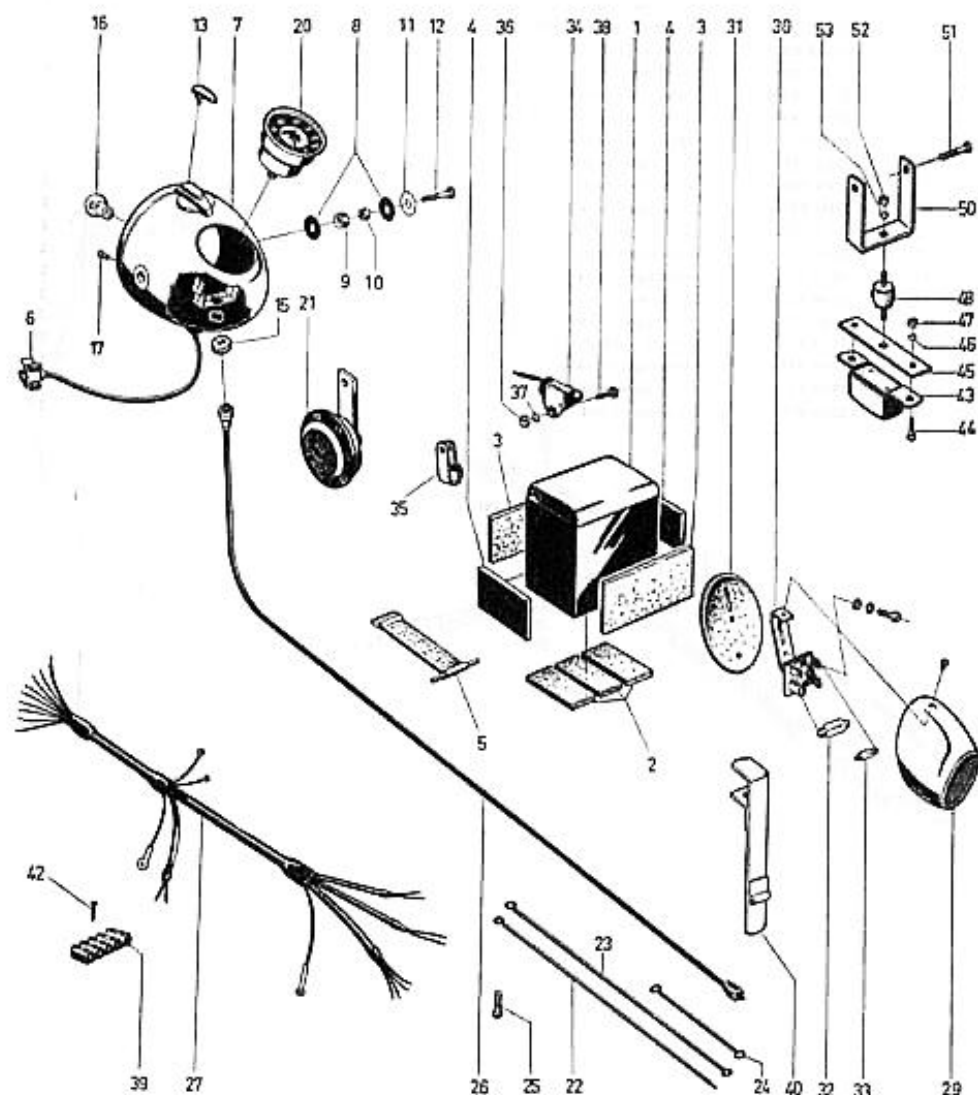


Lighting set

Picture No.	Order No.	Designation	Quantity
1	07 37 10 01	Battery	1
2	07 37 95 00	Battery base plate (rubber)	3
3	07 37 91 02	Battery plate	2
4	07 37 93 02	Battery plate	2
5	07 30 74 00	Battery mounting strap	1
6	03 37 50 00	Dimmer switch	1
7	07 37 01 01	Headlamp	1
	07 37 17 00	Reflector for headlamp	1
	07 37 21 00	Headlamp rim	1
	07 37 16 00	Headlamp lens	1
	07 37 25 00	Bulb socket	1
	07 37 18 00	Locating spring	4
	07 37 29 00	Ignition switch	1
8	00 94 79 23	Rubber ring	4
9	00 94 79 24	Rubber ring	2
10	00 92 32 50	Spacer bush	2
11	00 91 30 48	Washer	2
12	DIN 933	Hexagon screw	2
13	07 37 04 00	Ignition key	1
15	00 94 81 23	Rubber sleeve for speedometer transmission	1
16	DIN 49844	Bulb 6 V 35/35 W	1
17	DIN 72601	Bulb 6 V 1,5 W	3
20	23 37 02 00	Speedometer	1
21	07 37 51 01	Horn	1
22	07 30 77 01	Battery cable 30	1
23	07 30 71 02	Battery cable 31	1
24	23 30 105 00	Mass cable	1
25	DIN 86	Half round screw	1
26	01 57 23 00	Speedometer transmission	1
27	07 37 30 02	Cable set — frame	1
28	00 37 55 00	Tail light	1
29	00 37 59 00	Tail light cap	1
30	00 37 61 00	Tail light bulb socket	1
31	00 37 56 00	Rubber plate for tail light	1
32	DIN 72601	Bulb for stop light	1
33	DIN 72601	Tail light bulb	1
34	07 37 57 00	Stop light switch	1
35	00 93 20 05	Tube clamp	1
36	DIN 934	Hexagon nut	1
37	DIN 127	Spring washer	1
38	00 91 01 10	Hexagon screw	1
39	07 37 40 00	Terminal	5
40	07 30 102 00	Battery strap carrier	1
42	DIN 7971	Cylindrical screw S 3,9 x 13	2
43	23 17 12 00	Voltage regulator	1
44	DIN 86	Half round screw	2
45	07 17 43 00	Fastening flap	1
46	DIN 127	Spring washer	2
47	DIN 934	Hexagon nut	2
48	03 80 10 00	Rubber damper	1
50	07 17 13 60	Fastening bow	1
51	DIN 931	Hexagon screw	1
52	DIN 934	Hexagon nut	3
53	DIN 127	Spring washer	3

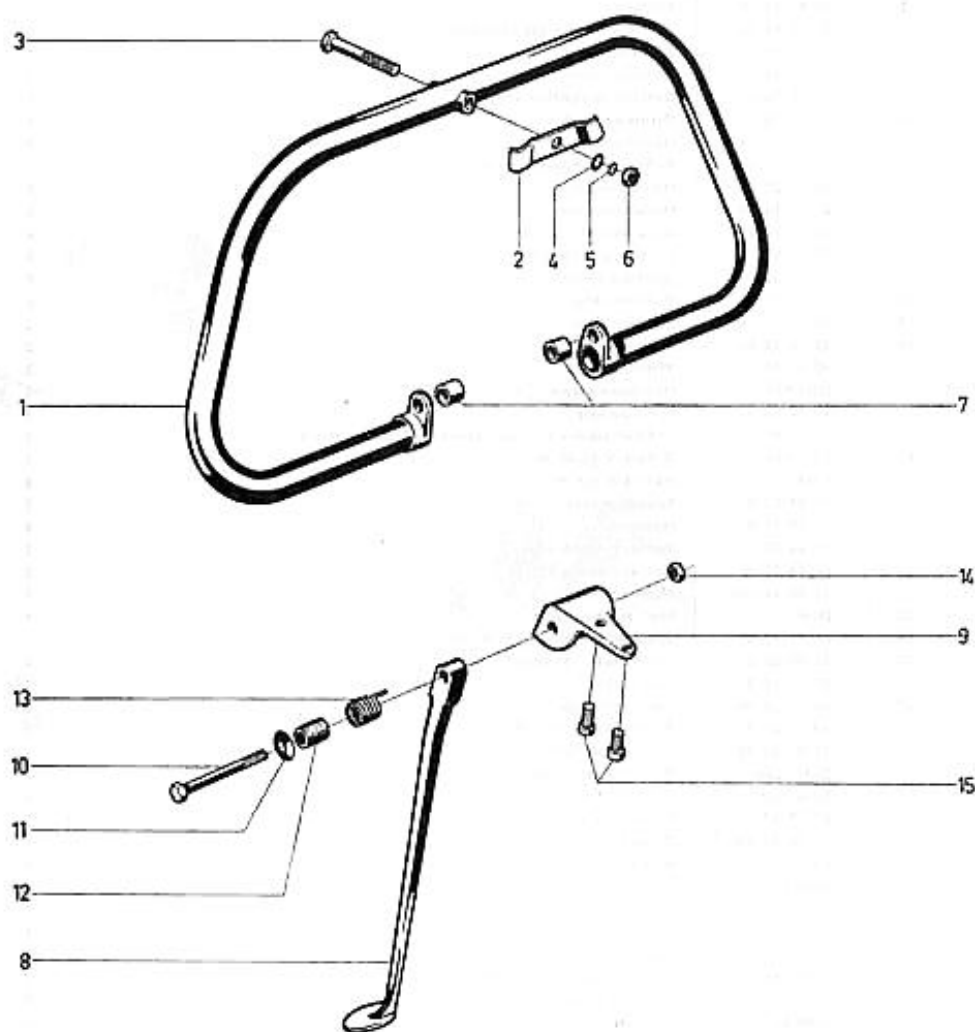

Crash bar, Extra side stand

Picture No.	Order No.	Designation	Quantity
1	07 80 20 00	Crash bar	1
2	00 83 47 00	Fastening clip	1
3	DIN 931	Hexagon screw	1
4	DIN 125	Washer	1
5	DIN 127	Spring washer	1
6	DIN 934	Hexagon nut	1
7	00 92 32 09	Spacer bush	2
8	07 32 32 00	Side stand lever	1
9	23 32 33 00	Side stand body	1
10	00 91 03 01	Side stand bolt	1
11	00 91 84 20	Flat spring	1
12	03 32 34 00	Guide roller	1
13	07 32 03 00	Return spring	1
14	DIN 936	Flat hexagon nut M 10	1
15	00 91 06 10	Allenhead screw	2
1	23 10 20 00	Crankshaft compl. consisting out of the following parts:	1
	23 12 03 00	Flywheel, left inner	1
	23 12 04 00	Flywheel, right inner	1
	23 12 05 00	Flywheel, left outer	1
	23 12 06 00	Flywheel, right outer	1
	23 10 68 00	Crankpin left	1
	23 10 69 00	Crankpin right	1
	07 12 21 00	Roller cage	2
	00 95 17 10	Roller 6,5 x 8,5 B	26
	07 12 69 00	Shim	4
	23 12 31 00	Connecting rod	2
9	23 12 41 00	Gudgeon pin bush	2
	10 13 21 00	Pinion	1
	23 11 03 00	Center plate	1
	00 91 41 10	Screw	2
	00 92 71 00	Bolt	1
	23 10 52 00	Pinion with screw wheel	1
	00 91 35 107	Spacer disk	2
	DIN 5412	Roller bearing NJL 35	1
	DIN 6504	Seal ring 30x42x5,7	2
	23 13 35 00	Timing pinion	1
	07 13 63 03	Bolt	1
	DIN 625	Roller bearing 4003	2
	23 13 50 00	Spacer ring	1
	00 91 60 11	Circlip 5 B 35	2
	00 91 30 47	Washer	1
	07 13 86 00	Security plate	1
	00 91 01 12	Hexagon Screw	1
	00 92 32 113	Spacer ring	1
	01 11 32 00	Breather flap	2
	01 11 33 00	Breather flap carrier	2
	DIN 920	Small headed oval head screw M 5x10	4
	10 10 85 00	Cover for center plate bearing	1
	DIN 91	Oval head screw M 6x12	4
	00 94 15 04	Rubber gasket	3
	DIN 939	Screw M 6x22	3

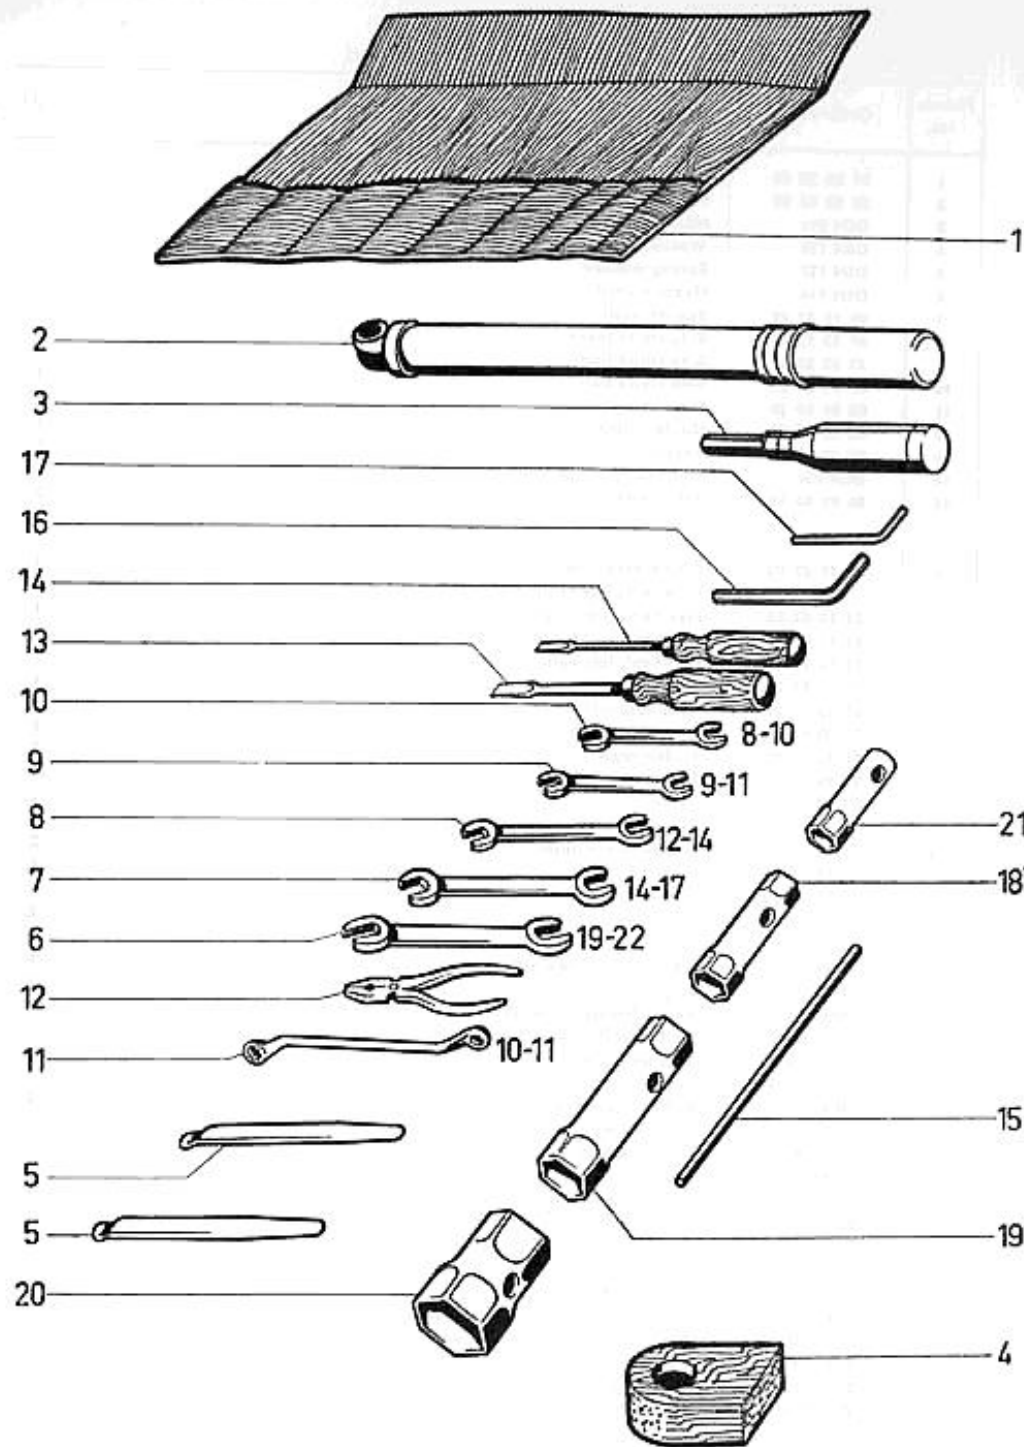

Tools

Picture No.	Order No.	Designation	Quantity
	07 81 03 00	Tool bag, compl.	1
1	00 81 04 00	Tool bag	1
2	00 81 15 01	Tyre pump	1
3	00 81 12 00	Grease gun	1
4	07 81 00 00	Wooden log	1
5	00 81 09 00	Tyre lifter	2
6	DIN 895	Double end spanner 19-22	1
7	DIN 895	Double end spanner 14-17	1
8	DIN 895	Double end spanner 12-14	1
9	DIN 895	Double end spanner 9-11	1
10	DIN 895	Double end spanner 8-10	1
11	DIN 838	Ring spanner 10-11	1
12	DIN 5244	Pliers	1
13	DIN 5269	Screw driver	1
14	DIN 5269	Screw driver	1
15	DIN 900	Tommy bar	1
16	DIN 911	Hexagon box spanner SW 8	1
17	DIN 911	Hexagon box spanner SW 5	1
18	00 81 18 00	Box spanner SW 11-14	1
19	00 81 20 00	Box spanner SW 17-21	1
20	00 81 19 00	Box spanner SW 27-32	1
21	DIN 459	Single box spanner SW 19	1